


LynTec RS-232 Controlled Panels and Load Centers

Motorized Breakers Make Control Easy!

All relay based systems **MUST** be electrically protected by a circuit breaker. Motorized breakers eliminate the need for wall or rack mounted relay based systems...

- Saves Space
- Saves redundant installation and hardware costs!
- UL listed circuit breaker with built-in internal switching capability manufactured by  **SQUARE D**
- Time tested, in service over 20 years
- Available in 15A, 20A and 30A - 1, 2 or 3 poles for remote control of all electrical loads
- Robust - rated for 60k on, off, on cycles
- Energy efficient - NO holding current or heat sinks required to maintain state - Runs cool, lasts long!
- Automatic load shedding and brownout protection in every panel.
- Emergency override function standard on every panel.



Specifying in 5 easy steps

1. Choose the control method: **SC**=RS-232
2. Choose the cabinet style: **LC** for load center and **P** for panelboard
3. Choose three phase (**3**) or single phase (**1**)
4. Choose the number of circuits: **26** or **41** Panelboards are only available in 41 circuits.
5. Choose the maximum number of controlled circuits: **10, 20, 30, 40, or 50**.

EX: **SCLC 326-20** = a 3 phase load center with 26 circuits (24 max controlled)

SCP 341-30 = a 3 phase panel board with 41 circuits (30 max controlled)

All panels and load centers

AVAILABLE MODELS

See www.LynTec.com for model specific design and submittal PDFs

LOAD CENTERS

SCLC 326-xx-Mxxx RS-232 Controlled Load Center
3Ø, 208Y/120 Vac, 4 wire. — 100 Amp Main Breaker Standard

LynTec

RS-232 Controlled Load Center

MODEL NUMBERS

SCLC 326-10-Mxxx

(Up to 10 RS-232 controlled circuits)

SCLC 326-20-Mxxx

(Up to 20 RS-232 controlled circuits)

SCLC 326-30-Mxxx

(Up to 26 RS-232 controlled circuits)

Square D QO327M100 Load Center with LynTec low-voltage sidecar.

Standard back-fed Main Breaker:

Squared D# QO3100VH. 100A,
(VH = 22k AIR)
[Amps Interrupt Rating]

Back-fed Main Breaker options

Part# suffix — **Bold face**=Amps
-M3030, -M3040: (10kAIR)


Square D# QO30xx

-M3050, -M3060, -M3070 or -M3090

Squared D# QO3xxVH
(all VH = 22k AIR)

Wire Sizes
#4 - 2/0 Cu

Outside dimensions
20.9" w., 29.8" h., 3.9" d.

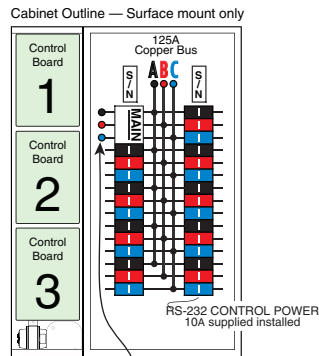

Main Lug Only -MLO option

Remove Back fed main and top feed as a MLO to gain 3 circuits. Feed from a protected disconnect.

Provides access to branch breaker positions 1, 3, & 5.

Model number becomes a

SCLC 329-10-MLO

(10 RS-232 controlled circuits)

SCLC 329-20-MLO

(20 RS-232 controlled circuits)

SCLC 329-30-MLO

(Up to 29 RS-232 controlled circuits)
(Holds up to 29 one pole breakers)

125 Amp. Panel Bus Rating

Wire size: #6 - 2/0 Cu

SCLC 341-xx-Mxxx RS-232 Controlled Load Center
3Ø, 208Y/120 Vac, 4 wire. — 225 Amp Main Breaker Standard

LynTec

RS-232 Controlled Load Center

MODEL NUMBERS

SCLC 341-10-Mxxx

(Up to 10 RS-232 controlled circuits)

SCLC 341-20-Mxxx

(Up to 20 RS-232 controlled circuits)

SCLC 341-30-Mxxx

(Up to 30 RS-232 controlled circuits)

SCLC 341-40-Mxxx

(Up to 40 RS-232 controlled circuits)

Square D QO342MQ225 Load Center with LynTec low-voltage sidecar.

Standard Main Breaker:

Square D# QDL32225. 225 Amp

Main Breaker options

Part# suffix — **Bold face**=Amps
-M3150 or -M3200

Square D# QDL32xxx series
(all 25k AIR) [Amps Interrupt Rating]

Wire Sizes


Main Breaker :

350 kcmil Al or 250 kcmil Cu.

100% Neutral has one feed lug
1- 350 kcmil Al or 1- 250 kcmil Cu

Outside dimensions

20.9" w., 39.3" h., 3.9" d

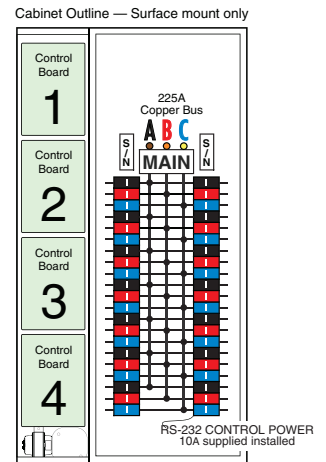

PANELBOARDS

SCP 341-xx-Mxxx RS-232 Controlled Panelboard
3Ø, 208Y/120 Vac, 4 wire. — 225 Amp Main Breaker Standard

LynTec

RS-232 Controlled Panelboard

MODEL NUMBERS

SCP 341-10-Mxxx

(Up to 10 RS-232 controlled circuits)

SCP 341-20-Mxxx

(Up to 20 RS-232 controlled circuits)

SCP 341-30-Mxxx

(Up to 30 RS-232 controlled circuits)

SCP 341-40-Mxxx

(Up to 40 RS-232 controlled circuits)

SCP 341-50-Mxxx

(Up to 41 RS-232 controlled circuits - limited by 42 circuit code rule)

Square D NQOD-NL MB Panel with LynTec low-voltage sidecar.


Standard SCP-225A Main Breaker:
225 Amp. - 65k AIR - MJG36225

Main Breaker options

Part# suffix — **Bold face** = Amps
-MHG3125, -MJG3150, -MJG3175 or -MJG3200

Wire Sizes

Main Breaker: 3/0 - 350 kcmil Al/Cu
200% Neutral has one feed lug that accepts 2 - 250 kcmil Cu wires

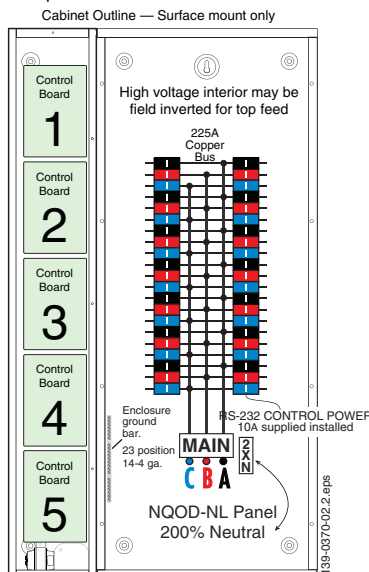

Outside dimensions

28.06" w., 50" h., 6.13" d.

Knockout panels supplied in both ends

Optional isolated technical ground

sidecar not shown

SCP 341-xx-M400 RS-232 Controlled Panelboard
3Ø, 208Y/120 Vac, 4 wire. — 400 Amp Main Breaker Standard

LynTec

RS-232 Controlled Panelboard

MODEL NUMBERS

SCP 341-10-M400

(Up to 10 RS-232 controlled circuits)

SCP 341-20-M400

(Up to 20 RS-232 controlled circuits)

SCP 341-30-M400

(Up to 30 RS-232 controlled circuits)

SCP 341-40-M400

(Up to 40 RS-232 controlled circuits)

SCP 341-50-M400

(Up to 41 RS-232 controlled circuits - limited by 42 circuit code rule)

Square D NQOD MB Panel with LynTec low-voltage sidecar.

Standard SCP 400A Main Breaker:
400 Amp. - 10k AIR - LA36400
[Amps Interrupt Rating]

Wire Sizes


Main Breaker: 1 #1- 600 kcmil Cu or
2 - #1-250 kcmil Cu (per NEC)

100% Neutral has one feed lug that accepts one #1-750 kcmil or two #1-300 kcmil Cu wires.

Outside dimensions:

28.06" w., 68.2" h., 6.13" d.

Optional isolated technical ground

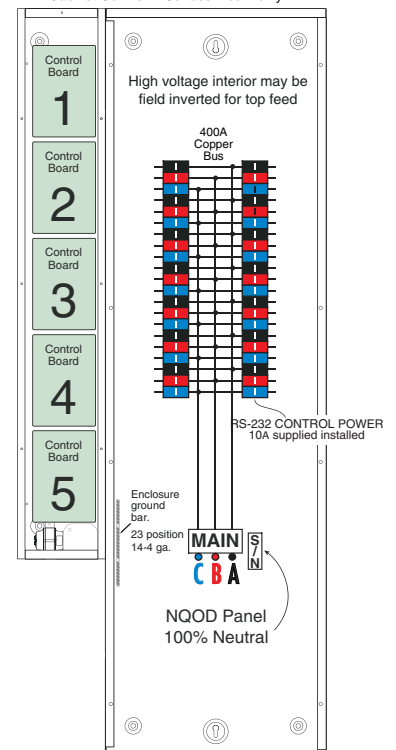

ARCHITECT'S and ENGINEER'S SPECIFICATIONS
SCP Series Serial Controlled Panelboard

All A.C. power for the A/V system shall be supplied from a source capable of being remote controlled via RS-232 control protocol.

Circuits shall be individually addressable providing on and off control via RS232 protocol.

A means of visual operator feedback shall provide an indication of circuit on/off status locally via LEDs.

The system shall have brownout (undervoltage) protection; monitoring the line voltage and triggering an automatic shutdown if the line voltage drops below 95 volts for more than 2 seconds. The system shall automatically return circuits to on state when power resumes and remains above 105 volts for more than 2 seconds without operator intervention.

The system shall have emergency shutdown capability triggered by external contacts or the system operator.

Un-motorized circuits, as required, shall be supplied from the same A.C. source so that a single lever main circuit breaker is dedicated to the system.

Three phase panelboards shall have 200% neutrals.

Single phase panelboards shall have a single neutral.

Panelboards shall have a separate and attached isolated technical ground section.

All branch circuit breakers shall be bolt-on.

The Serial Controlled Panelboard system shall be the LynTec model SCP xxx series Panelboard.

Manufacturer shall warrant specified equipment to be free from defects in materials and workmanship as follows: at least (15) months from date of purchase for line voltage equipment; at least (5) years from the date of purchase for control electronics.

LynTec — 800-724-4047 — www.LynTec.com

Models:

Single Phase, 65k AIR: **SCP 141-12, SCP 141-24, SCP 141-36, SCP 141-48, SCP 141-60**

Balanced Power, 60v-0-60v, 65k AIR: **SCP 119-12, SCP 119-24**

Three Phase, 65k AIR: **SCP 341-12, SCP 341-24, SCP 341-36, SCP 341-48, SCP 341-60**

This document available in Word format:

http://www.lyntec.com/139-0578_SCP_A&E_Spec.docx

Most recent version pdf:

http://www.lyntec.com/139-0578_SCP_A&E_Spec.pdf

SC-10 RS232 PROTOCOL

Commands set

Command	Decimal	Hexadecimal
Start byte	176	0xB0
Stop byte	240	0xF0
Board address	1 - 99	0x01 - 0x63
Output address	1 - 10	0x01 - 0x0A
Output ON	180	0xB4
Output OFF	181	0xB5
Output status	182	0xB6
Status of all outputs	189	0xBD
All ON	186	0xBA
All OFF	187	0xBB
Set/clear output verification status*	190	0xBE

*Not be implemented - autoscan can distinguish between RR7 and RR9

2. Commands description

2.1 Outputs ON command

0xB0, board_address, 0xB4, output_address_1, ..., output_address_m, 0xF0
m<=10 (0x0A)

Example: B0 01 B4 04 0A F0, turns on outputs at 4 and 10, on 1st card

2.2 Outputs OFF command

0xB0, board_address, 0xB5, output_address_1, ..., output_address_n, 0xF0
n<=10 (0x0A)

Example: B0 02 B5 09 F0, turns off output at 9, on 2nd card

2.3 Outputs ON/OFF command

0xB0, board_address, 0xB4, output_address_1, ..., output_address_m, 0xB5, output_address_1, ..., output_address_n, 0xF0
m and n<=10 (0x0A)

Example: B0 01 B4 04 0A B5 09 F0, turns on output at 4 and 10, and turns off output at 9, on 1st card

2.4 Outputs status

0xB0, board_address, 0xB6, output_address_1, ..., output_address_m, 0xF0
m<=10 (0x0A)

Example: B0 03 B6 04 0A F0, status of outputs at 4 and 10, on 3rd card

2.5 Status of all outputs

0xB0, board_address, 0xBD, 0xF0

2.6 All ON - turn on all available outputs

0xB0, board_address, 0xBA, 0xF0

2.7 All OFF - turn off all available outputs

0xB0, board_address, 0xBB, 0xF0

2.8 Set/clear output verification status (NOT IMPLEMENTED)

0xB0, board_address, 0xBE, output_address_i, output_ver_status_i, output_address_j, output_ver_status_j, ..., output_address_n, output_ver_status_n, 0xF0

output_address_i, output_ver_status_i, output_address_j, output_ver_status_j, ..., output_address_n, output_ver_status_n - addresses and status of outputs, n<=10

Output_ver_status coding

Status	Code
Disable	0x01
Enable	0x02

When verification status of the output is disabled, the board will always respond with "no verification" status for this output. Verification status shall be disabled for all outputs driving RR7 relays.

3. Responses

3.1 Output status codes

Status	Code
Off	0x01
On	0x02
Fault	0x03
No verification, expected off	0x04
No verification, expected on	0x05
Empty	0x06

3.2 Output status change response

This response is transmitted when output(s) change(s) status for ANY reason (RS232 command, button push, brown out, recover from brown out, emergency override, recover from emergency override).

0xB0, board_address, 0xB6, output_address_i, output_status_i, ..., output_address_n, output_status_n, 0xF0

n<=10 (0x0A)

Example: B0 01 B6 04 01 05 02 0A 06 F0, output at 4 is off, at 5 is on, and at 10 is empty, on 1st card

3.3 Status of all ten outputs (transmitted only in reply to status of all outputs command)

0xB0, board_address, 0xBD, byte_1, ..., byte_10, 0xF0

Example: B0 02 BD 01 01 01 01 01 02 02 02 02 06 F0, outputs 1 thru 5 are off, 6 thru 9 are on, and 10 is empty, on 2nd card

4. AMX Device Discovery

Beacon request: "AMX\r"

Beacon: "AMXB<-SDKClass=Utility><-Make=Lyntec><-Model=SC10><-Revision=1.0.0>\r"

Planning and Layout Worksheet — As-built door label

SCP 141-xx-M125 to -M225 RS-232 Controlled Panelboard

Breaker types, sizes, positions and connections

Job _____

Panel _____

Comments _____

by _____ Date _____

Transfer as-built information to the door label upon completion.

Keep this sheet for as-built documentation

Available as PDF download
www.lyntec.com/139-0575_SCP141_Plnr.pdf


Each motorized breaker is actuated by a command from a RS-232 control device.
 As-built door label example:
 The RS-232 # _____ is the RS-232 address of this breaker.
 The board jumpers set the RS-232 address of the board. Each breaker has a sub-address of 1-10
 Bold line around box = **suggested** control board: #1 (Top), #2, #3 or #4.
 Fill in box to indicate which control board this breaker is connected to.

SC-10 circuit boards in left-hand, low-voltage cabinet.

SCP 141-xx-M125 to -M225


(65k AIR main) - 225A bus
 xx = Number of controller circuits
 10, 20, 30, 40 or 50.

Cabinet outline - Surface mount only
 Outside dimensions: 28.06" w., 50" h., 6.13" d.
 Knockout panels supplied in both ends.

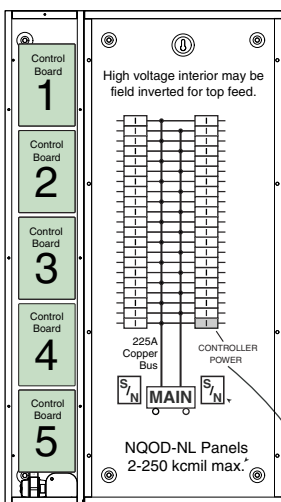


Square D NQOD-NL MB Panel with LynTec sidacar.
 Standard SCP Main Breaker: 225 Amp. - 65k AIR - M225 Square D# MJGP36225
 Main Breaker options — Part# suffix
Bold = Amps -M125, M150, -M175 or -M200 (all 65k AIR)
 [Amps Interrupt Rating]
 Main Breaker wire: 3/0-350 kcmil Al/Cu.
 200% Neutral has one feed lug that accepts two 250 kcmil Cu wires.

1	Amp. <input type="checkbox"/> Un-motorized. <input type="checkbox"/> Motorized-RS-232 #	2	Amp. <input type="checkbox"/> Un-motorized. <input type="checkbox"/> Motorized-RS-232 #
3	Amp. <input type="checkbox"/> Un-motorized. <input type="checkbox"/> Motorized-RS-232 #	4	Amp. <input type="checkbox"/> Un-motorized. <input type="checkbox"/> Motorized-RS-232 #
5	Amp. <input type="checkbox"/> Un-motorized. <input type="checkbox"/> Motorized-RS-232 #	6	Amp. <input type="checkbox"/> Un-motorized. <input type="checkbox"/> Motorized-RS-232 #
7	Amp. <input type="checkbox"/> Un-motorized. <input type="checkbox"/> Motorized-RS-232 #	8	Amp. <input type="checkbox"/> Un-motorized. <input type="checkbox"/> Motorized-RS-232 #
9	Amp. <input type="checkbox"/> Un-motorized. <input type="checkbox"/> Motorized-RS-232 #	10	Amp. <input type="checkbox"/> Un-motorized. <input type="checkbox"/> Motorized-RS-232 #
11	Amp. <input type="checkbox"/> Un-motorized. <input type="checkbox"/> Motorized-RS-232 #	12	Amp. <input type="checkbox"/> Un-motorized. <input type="checkbox"/> Motorized-RS-232 #
13	Amp. <input type="checkbox"/> Un-motorized. <input type="checkbox"/> Motorized-RS-232 #	14	Amp. <input type="checkbox"/> Un-motorized. <input type="checkbox"/> Motorized-RS-232 #
15	Amp. <input type="checkbox"/> Un-motorized. <input type="checkbox"/> Motorized-RS-232 #	16	Amp. <input type="checkbox"/> Un-motorized. <input type="checkbox"/> Motorized-RS-232 #
17	Amp. <input type="checkbox"/> Un-motorized. <input type="checkbox"/> Motorized-RS-232 #	18	Amp. <input type="checkbox"/> Un-motorized. <input type="checkbox"/> Motorized-RS-232 #
19	Amp. <input type="checkbox"/> Un-motorized. <input type="checkbox"/> Motorized-RS-232 #	20	Amp. <input type="checkbox"/> Un-motorized. <input type="checkbox"/> Motorized-RS-232 #
21	Amp. <input type="checkbox"/> Un-motorized. <input type="checkbox"/> Motorized-RS-232 #	22	Amp. <input type="checkbox"/> Un-motorized. <input type="checkbox"/> Motorized-RS-232 #
23	Amp. <input type="checkbox"/> Un-motorized. <input type="checkbox"/> Motorized-RS-232 #	24	Amp. <input type="checkbox"/> Un-motorized. <input type="checkbox"/> Motorized-RS-232 #
25	Amp. <input type="checkbox"/> Un-motorized. <input type="checkbox"/> Motorized-RS-232 #	26	Amp. <input type="checkbox"/> Un-motorized. <input type="checkbox"/> Motorized-RS-232 #
27	Amp. <input type="checkbox"/> Un-motorized. <input type="checkbox"/> Motorized-RS-232 #	28	Amp. <input type="checkbox"/> Un-motorized. <input type="checkbox"/> Motorized-RS-232 #
29	Amp. <input type="checkbox"/> Un-motorized. <input type="checkbox"/> Motorized-RS-232 #	30	Amp. <input type="checkbox"/> Un-motorized. <input type="checkbox"/> Motorized-RS-232 #
31	Amp. <input type="checkbox"/> Un-motorized. <input type="checkbox"/> Motorized-RS-232 #	32	Amp. <input type="checkbox"/> Un-motorized. <input type="checkbox"/> Motorized-RS-232 #
33	Amp. <input type="checkbox"/> Un-motorized. <input type="checkbox"/> Motorized-RS-232 #	34	Amp. <input type="checkbox"/> Un-motorized. <input type="checkbox"/> Motorized-RS-232 #
35	Amp. <input type="checkbox"/> Un-motorized. <input type="checkbox"/> Motorized-RS-232 #	36	Amp. <input type="checkbox"/> Un-motorized. <input type="checkbox"/> Motorized-RS-232 #
37	Amp. <input type="checkbox"/> Un-motorized. <input type="checkbox"/> Motorized-RS-232 #	38	Amp. <input type="checkbox"/> Un-motorized. <input type="checkbox"/> Motorized-RS-232 #
39	Amp. <input type="checkbox"/> Un-motorized. <input type="checkbox"/> Motorized-RS-232 #	40	Amp. <input type="checkbox"/> Un-motorized. <input type="checkbox"/> Motorized-RS-232 #
41	Amp. <input type="checkbox"/> Un-motorized. <input type="checkbox"/> Motorized-RS-232 #	RS-232 CONTROL POWER 10A un-motorized breaker supplied installed.	

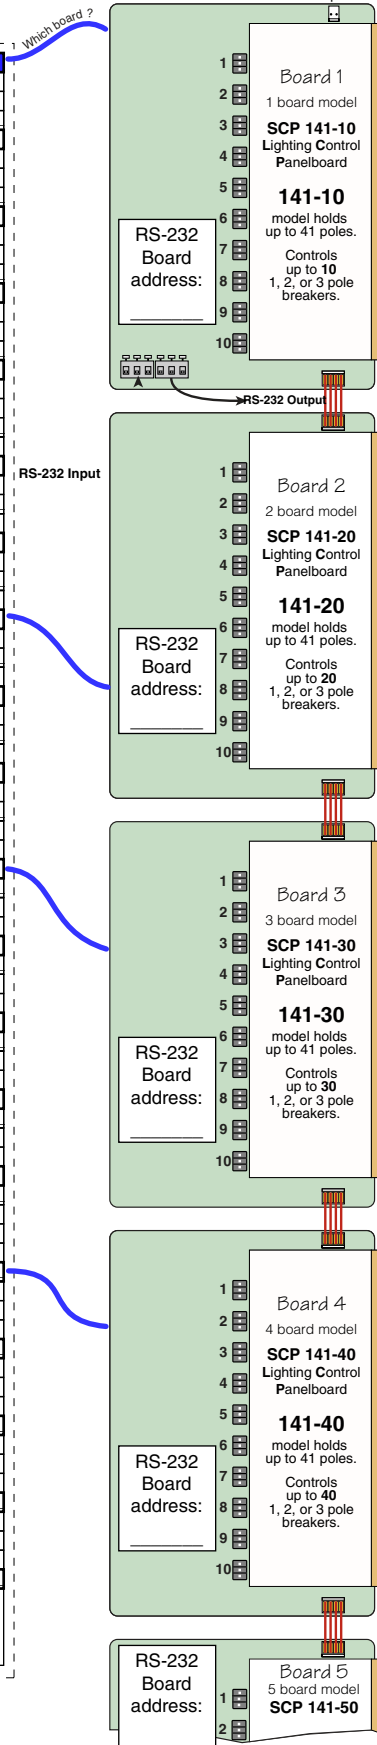

Outline Drawing

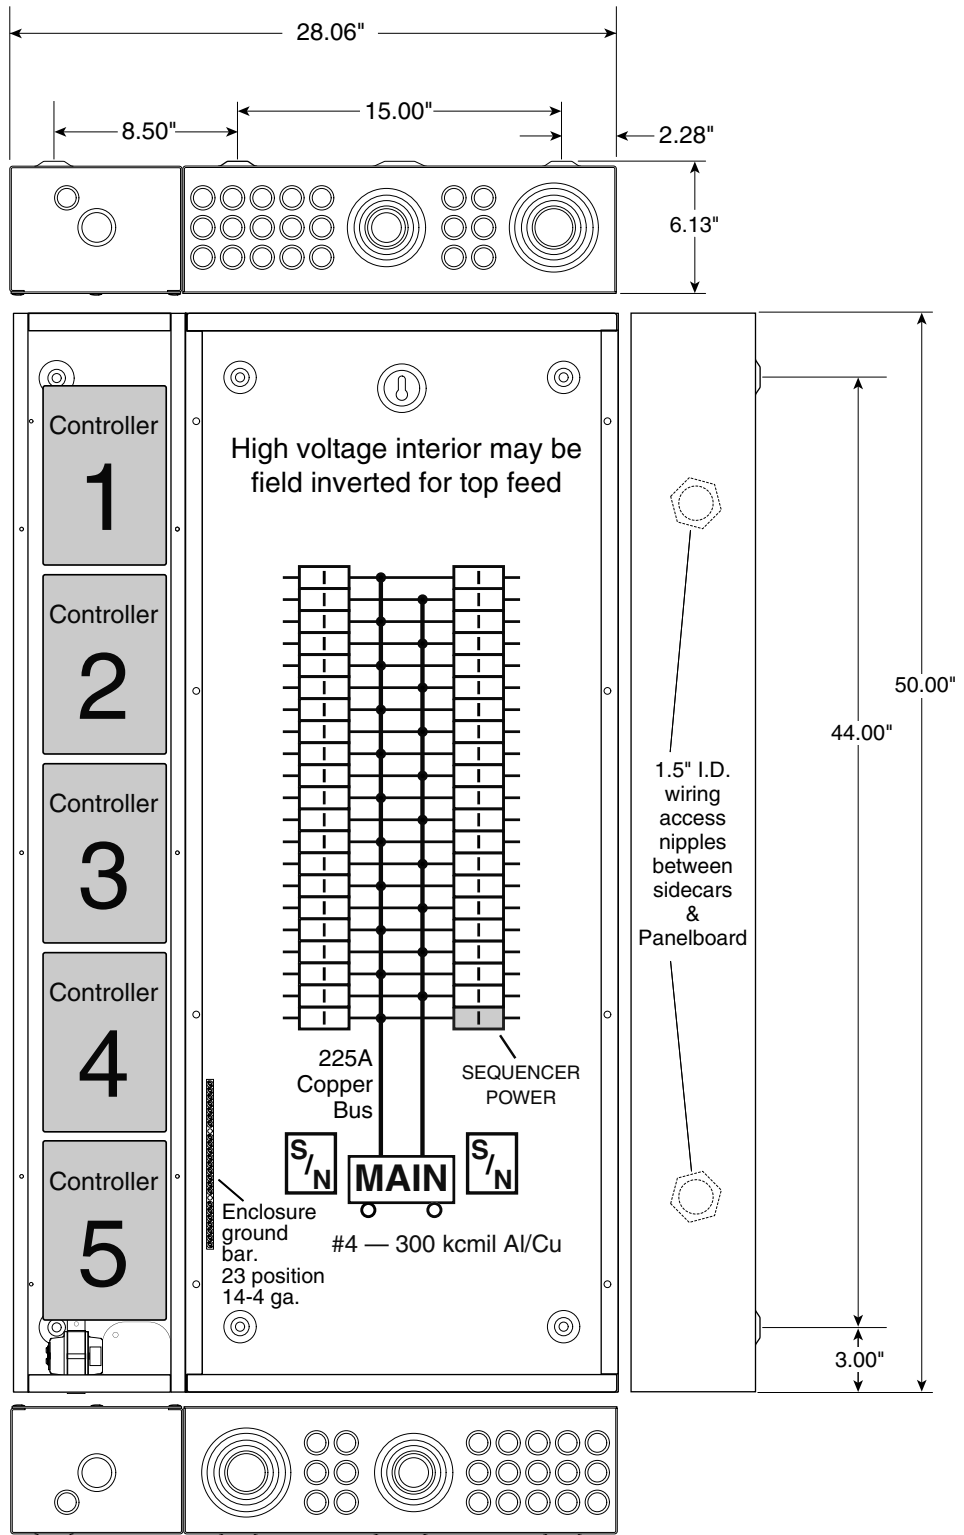

LynTec
SCP 141-xx (25k AIR main)
 [Special order, NCNR]

Square D NQOD MB Panel
 with LynTec sidecars.

225A Copper Bus

Main Breakers available


QGL22xxx series — All 65k AIR

Part# suffix — **Bold face** = Amps

- MQG2070, -MQG2080,
- MQG2090, -MQG2100,
- MQG2110, -MQG2125,
- MQG2150, -MQG2175,
- MQG2100, -MQG2200,
- MQG2225.

Outside dimensions
 28" w., 50" h., 6.13" d.

Outline Drawing with optional ITG sidecar

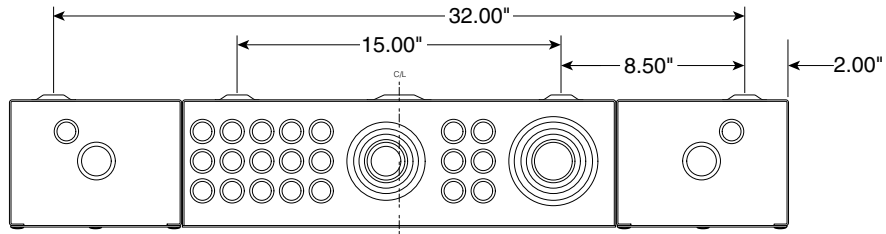

LynTec
SCP 141-xx (25k AIR main)
[Special order, NCNR]

Square D NQOD MB Panel
with LynTec sidecars.

225A Copper Bus



Main Breakers available

QGL22xxx series — All 65k AIR

Part# suffix — **Bold face** = Amps

- MQG2070, -MQG2080,
- MQG2090, -MQG2100,
- MQG2110, -MQG2125,
- MQG2150, -MQG2175,
- MQG2100, -MQG2200,
- MQG2225.

Outside dimensions
36" w., 50" h., 6.13" d.

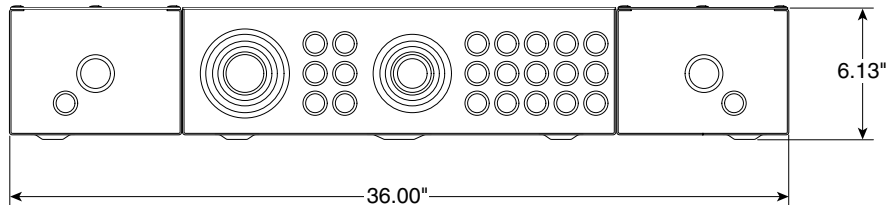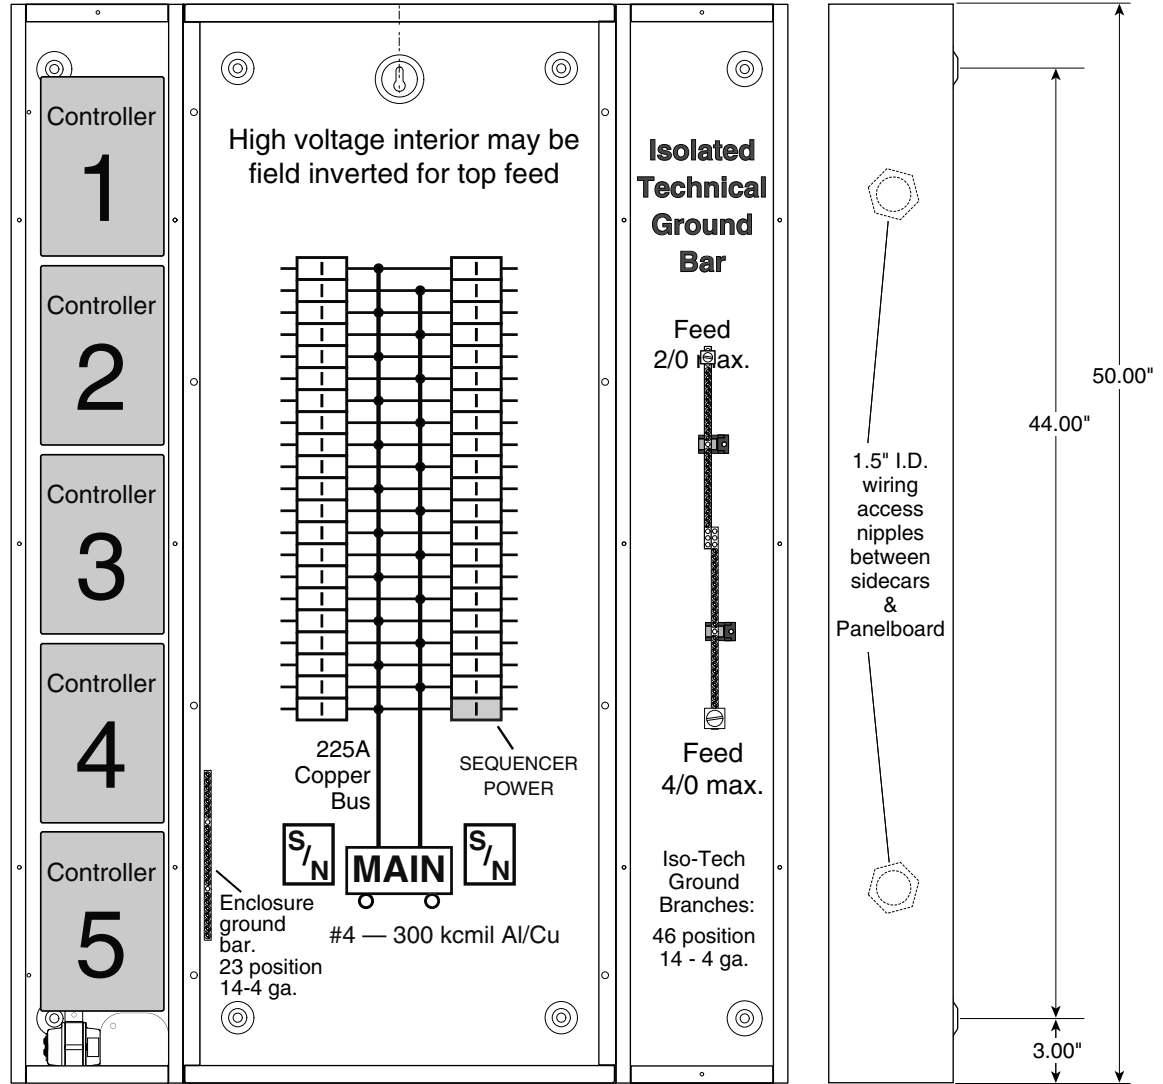



QDL & QGL
 2 and 3-pole
 70-250 Amperes

POWERPACT Q-frame ▲ —250 A, Thermal-magnetic (240 Vac)

Current Rating @ 40°C	AC Magnetic Trip Settings		D Interrupting	G Interrupting
	Hold	Trip	Catalog Number	Catalog Number
2-pole, 240 Vac				
70	1000	1800	QDL22070	QGL22070 ++
80	1000	1800	QDL22080	QGL22080 ++
90	1000	1800	QDL22090	QGL22090 ++
100	1200	2400	QDL22100	QGL22100 ++
110	1200	2400	QDL22110	QGL22110 ++
125	1200	2400	QDL22125	QGL22125 ++
150	1200	2400	QDL22150	QGL22150 ++
175	1200	2400	QDL22175	QGL22175 ++
200	1200	2400	QDL22200	QGL22200 ++
225	1200	2400	QDL22225	QGL22225 ++
250	1200	2400		

LynTec
MSP 139
SCP 139
 Use a 2 pole, back-fed main breaker, rated at 100 AMPS or less.

LynTec
MSP 119, MSP 141
SCP 141
 ++ All models
 70-225A
 Special order. **NCNR**
 Non Cancelable
 Non Returnable

Current Rating @ 40°C	AC Magnetic Trip Settings		D Interrupting	G Interrupting
	Hold	Trip	Catalog Number	Catalog Number
3-pole, 240 Vac				
70	1000	1800		QGL32070
80	1000	1800		QGL32080
90	1000	1800		QGL32090
100	1200	2400		QGL32100
110	1200	2400		QGL32110
125	1200	2400		QGL32125
150	1200	2400	QDL32150 +	QGL32150
175	1200	2400	QDL32175	QGL32175
200	1200	2400	QDL32200 +	QGL32200
225	1200	2400	QDL32225	QGL32225
250	1200	2400		

LynTec
LCLC 326
MSLC 326
MSLC 338
MSP 338
SCLC 326
SCLC 338
SCP338
 Use a 3 pole, back-fed main breaker, rated at 100 AMPS or less.
 QO3xxxVH Series

LynTec
LCLC 341
MSLC 341
SCLC 341
 Standard
 + Optional from stock

▲ Replacement lugs are not available for POWERPACT Q-frame circuit breakers. Lugs for the POWERPACT Q-frame circuit breakers accept (1) #4-300 kcmil.

Interrupting Ratings (kA)

	QD	QG
240 V	25	65

For **Branch Breaker Series Ratings**
 see http://www.lyntec.com/139-0407_Series_Ratings.pdf

Accessories pages 6-36-6-38
 Optional Lugs pages 6-43, 6-44
 Dimensions pages 6-49, 6-50
 Enclosures pages 6-51-6-54

Series Ratings

For NQOD and NF Panelboards
Class 1630, 1670

This page contains UL Tested and Certified series combination ratings for panelboards. These ratings apply to either an integral main located in the same enclosure or a remote main located in a separate enclosure.

NQOD Series Ratings

Maximum System Voltage AC ^c	Maximum Short Circuit Current Rating (RMS Symmetrical)	Integral or Remote Main Circuit Breakers and Remote Main Fuses	Branch Circuit Breaker Designations and Allowable Ampere Ranges ^{ab}			
			Type	1-pole	2-pole	3-pole
120/240 1Ø	22k	MG	QO (B)	15-30 A
	42k	HD, JD	QO (B) PL	15-30 A	15-60 A	15-30 A
	65k	HG, JG	QO (B) PL	15-30 A	15-60 A	15-30 A
	100k	HJ, JJ	QO (B) PL	15-30 A	15-60 A	15-30 A
	125k	HL, JL	QO (B) PL	15-30 A	15-60 A	15-30 A
120/240 1Ø 208Y/120	100k	DJ 400 A	QO (B) QO (B) GFI QO (B) VH QO (B) PL QO (B) AFI	15-70 A 15-30 A 15-30 A 15-30 A 15-20 A	15-125 A 40-60 A 150 A 15-150 A ...
		QJ	QO (B) QO (B) AS QO (B) GFI QO (B) PL QO (B) VH QO (B) AFI	15-70 A 15-30 A 15-30 A 15-30 A 15-30 A 15-20 A	15-125 A 15-30 A 15-60 A 15-60 A 150 A ...	15-30 A 15-30 A 15-30 A 15-30 A 35-150 A ...
208Y/120	18k	LA/LH (L) 34200MC LA/LH (L) 34225MC LA/LH (L) 34250MC LA/LH (L) 34400MC	QO (B)	15-30 A	15-30 A	15-30 A
		22k	UMB-xx QO (B) VH MB-xx	QO (B) QO (B) AS QO (B) GFI QO (B) PL QO (B) AFI	15-70 A 15-30 A 15-30 A 15-30 A 15-20 A	15-125 A 15-30 A 15-60 A 15-30 A ...
208Y/120	22k	Q2-Hf	QO (B) QO (B) GFI QO (B) AFI	15-70 A 15-30 A 15-20 A	15-100 A 15-30 A ...	15-30 A
		25k	QD UMB-xx MB-xx	QO (B) QO (B) AS QO (B) GFI QO (B) PL QO (B) VH QO (B) AFI	15-70 A 15-30 A 15-30 A 15-30 A 15-30 A 15-20 A	15-125 A 15-30 A 15-60 A 15-60 A 150 A ...
240	25k	ED, Fdf	QO (B) QO (B) GFI QO (B) AFI	15-70 A 15-30 A 15-20 A	15-125 A 15-60 A ...	15-100 A
		KDf	QO (B) QO (B) AS QO (B) GFI QO (B) AFI	15-70 A 15-30 A 15-30 A 15-20 A	15-125 A 15-30 A 15-60 A ...	15-100 A 15-30 A
240	25k	HD, JD	QO (B) QO (B) VH QO (B) GFI QO (B) PL QO (B) AFI QO (B) H QOB2150VH	15-70 A ... 15-30 A 15-20 A 15-20 A	15-125 A ... 15-60 A ... 150 A ...	15-100 A 35-150 A
		42k	LA, MA MG	Q2L-Hf QDL QO (B) VH 15-30 A	110-225 A 70-225 A 15-30 A
240	42k	LC 600 A Maximum	QO (B) QO (B) VH	15-70 Ad 15-30 A	... 15-125 A	... 15-100 A (3P 208 V Max.)
			QO (B) GFI QO (B) AFI QO (B) VH	15-30 Ae 15-20 A 15-30 A	15-60 A ... 15-125 A 15-100 A (3P 208 V Max.)
240	65k	DJ 400 A	QO (B) QO (B) VH QO (B) H	15-70 A 15-30 A ...	15-125 A 150 A 15-100 A	15-100 A
			65k	EG, Fgf, KGf	QO (B) QO (B) GFI QO (B) AFI	15-70 A 15-30 A 15-20 A
240	65k	QG, HG, JG	QO (B) QO (B) AS QO (B) VH	15-70 A 15-30 A ...	15-125 A 15-30 A ...	15-30 A 15-30 A 35-150 A
			BMB-xx QO (B) GFI QO (B) PL QO (B) AFI	15-30 A 15-30 A 15-30 A	15-60 A 15-60 A 15-30 A 15-30 A
240	65k	HG, JG	QO (B) QO (B) VH QO (B) H QOB2150VH	15-70 A	15-125 A ... 15-100 A 150 A	15-100 A 35-150 A
			65k	FCL22 KCL22 FCL32 KCL32	QO (B) QO (B) AS QO (B) GFI QO (B) AFI	15-70 A 15-30 A 15-30 A 15-20 A
240	100k	400 A Max. Class J or T6 Fuses	QO (B) VH QO (B) AFI	15-30 A 15-20 A	15-125 A 150 A	15-100 A ...
			100k	FCL24 KCL24 FCL34 KCL34	QO (B) QO (B) AS QO (B) GFI QO (B) AFI	15-70 A 15-30 A 15-30 A 15-20 A
240	100k	200 A Max. Class T3 Fuses	QO (B) AFI	15-20 A
			100k	EJ, FJf	QO (B) QO (B) GFI QO (B) AFI	15-70 A 15-30 A 15-20 A

LynTec models
LCLC 326
MSLC 326
SCLC 326
MSLC 338
SCLC 338
MSP 338
SCP 338
MSP139

LynTec models
LCLC 341
MSLC 341
SCLC 341

LynTec models
MSLC 113
MSLC 127
MSLC 129
are series rated 22k AIR.
see QO130Mxx on pg 1-3 of Digest

8 PANELBOARDS

LynTec models
MSP 119
MSP 141
SCP 141
LCP 341
MSP 341
SCP 341

QOxxx (B) = BUMB series Bolt-on, UnMotorized Breaker
-xxx = poles. xxx = trip current.
[1 pole] BUMB-15, BUMB-20, BUMB-30
[2 pole] BUMB-215, BUMB-220, BUMB-230
[3 pole] BUMB-315, BUMB-320, BUMB-330
QOxxx = UMB series clip-on, UnMotorized Breaker
-xxx = poles. xxx = trip current.
[1 pole] UMB-15, UMB-20, UMB-30
[2 pole] UMB-215, UMB-220, UMB-230
[3 pole] UMB-315, UMB-320, UMB-330
All 15 & 20 A breakers are HM (High Magnetic)

NQOD Series Ratings (Continued)

Maximum System Voltage AC ^c	Maximum Short Circuit Current Rating (RMS Symmetrical)	Integral or Remote Main Circuit Breakers and Remote Main Fuses	Branch Circuit Breaker Designations and Allowable Ampere Ranges ^{ab}			
			Type	1-pole	2-pole	3-pole
240	100k	HJ, JJ	QO (B) QO (B) VH QO (B) GFI QO (B) PL QO (B) AFI	15-70 A ... 15-30 A 15-30 A 15-20 A	15-125 A ... 15-60 A 15-60 A ...	15-100 A 35-150 A ... 15-30 A ...
			125k	HL, JL	QO (B) H QO (B) VH QOB2150VH	15-70 A
200k	FI, KI	QO (B) QO (B) AS QO (B) GFI QO (B) AFI			15-70 A 15-30 A 15-30 A 15-20 A	15-125 A 15-30 A 15-60 A ...
		200k	Maximum Fuses 200 A Class J or T6 400 A Class T3	QO (B) QO (B) AS QO (B) GFI	15-70 A 15-30 A 15-30 A	15-125 A 15-30 A 15-60 A

▲ Suffixes HID, SWD and SWN may also be applied to the applicable branch circuit breakers shown above, except suffix SWN may NOT be applied in combination with LC main circuit breakers.
■ Where QO (B) circuit breakers are shown above, QO (B) H, QO (B) VH, and QH (B) circuit breakers may also be used.
For shown circuit breakers rated less than this maximum voltage, the indicated short circuit current rating also applies, but at the voltage rating of the circuit breaker.
★ Only 15-30 A circuit breakers may be used when the LC circuit breaker is rated 450, 500 or 600 A.
▼ Circuit breakers may not be used when the LC circuit breaker is rated 450, 500 or 600 A.
△ Obsolete. Contact your nearest Square D/Schneider Electric sales office for replacement circuit breaker. One-pole FJ circuit breakers are still available.
Where QO(B) GFI circuit breakers are shown above, QO(B), EPD circuit breakers may also be used.

NF Series Ratings

Maximum System Voltage AC	Maximum Short Circuit Current Rating (RMS Symmetrical)	Main Type	Branch Type	Poles
240	65,000	EG, FH, FGF, KH, LH, MH, MX, HG, JG	EDB, EDB-EPD ECB-G3	1, 2 & 3
		EJ, FC, FJf, KC, LC, LX, HJ, JJ	EDB, EDB-EPD, EGB	
	100,000	EJ, FC, KC, HJ, JJ	ECB-G3	1, 2 & 3
		HL, JL	EDB, EDB-EPD, EGB, ECB-G3	
240	125,000	HL, JL	EDB, EDB-EPD, EGB, ECB-G3	1, 2 & 3
	200,000	FI, KI, LI, LXI	EDB, EDB-EPD, EGB, EJB	
240	35,000	EG, FGF, KH, LH, HG, JG	EDB, EDB-EPD ECB-G3	1, 2 & 3
		EG, HG, JG	ECB-G3	
480Y/277	65,000	EJ, FC, FJf, KC, LC, LX, HJ, JJ	EDB, EDB-EPD, EGB	1, 2 & 3
		EJ, FC, KC, HJ, JJ	ECB-G3	
480Y/277	100,000	HL, JL	EDB, EDB-EPD, EGB	1, 2 & 3
		FI, KI, LI, LXI	EDB, EDB-EPD, EGB, EJB	
480Y/277	200,000	FI, KI	ECB-G3	1, 2 & 3
		Remote Main Fuse		
600Y/347	18,000	HG, JG, MG	EDB, EDB-EPD	1, 2, 3
		EJ, FI, KH, KL, LC, LE, LX, LI, LXI, HJ, JJ	EDB, EDB-EPD, EGB	
600Y/347	25,000	LH	EDB(15-70 A), EGB	1, 2, 3
		LC, LE	EDB, EDB-EPD, EGB, EJB	
600Y/347	35,000	HL, JL	EDB, EDB-EPD, EGB	1, 2, 3
		FI, KI	EDB, EDB-EPD, EGB, EJB	
600Y/347	65,000	LI, XI	EJB	1, 2 & 3
		Remote Main Fuse		
240	200,000	200 Ampere Maximum Class J or T (600V)	ECB-G3	1, 2 & 3
		400 Ampere Maximum Class J or T (600V)	EDB, EDB-EPD, EGB, EJB	
480Y/277	200,000	200 Ampere Maximum Class J or T (600V)	EDB, EDB-EPD, EGB, EJB	1, 2 & 3
		200 Ampere Maximum Class J or T (600V)	ECB-G3	
600Y/347	200,000	200 Ampere Maximum Class J or T (600V)	EDB, EDB-EPD, EGB, EJB	1, 2 & 3
		200 Ampere Maximum Class J or T (600V)	ECB-G3	

QOPLxxx-5393 = BMB series Bolt-on, Motorized. (REMOTELY OPERATED)
-xxx = poles. xxx = trip current. -5393 suffix denotes special 60" control wires.

[1 pole] BMB-15, BMB-20, BMB-30
[2 pole] BMB-215, BMB-220, BMB-230, BMB-240, BMB-250, BMB-260
[3 pole] BMB-315, BMB-320, BMB-330

QOPLxxx-5393 = MB series clip-on, Motorized. (REMOTELY OPERATED)
-xxx = poles. xxx = trip current. -5393 suffix denotes special 60" control wires.

[1 pole] MB-15, MB-20, MB-30
[2 pole] MB-215, MB-220, MB-230, MB-240, MB-250, MB-260
[3 pole] MB-315, MB-320, MB-330

Instruction Bulletin

QO-PL (Plug-on), QOB-PL (Bolt-on) Powerlink[®] Remotely Operated Circuit Breakers

(Use in Type QO Load Centers and Type NQO, NQOB, and NQOD Panelboards)

Retain for future use.

REQUIREMENTS

Remotely Operated Circuit Requirements

⚠ DANGER

HAZARD OF ELECTRIC SHOCK, BURN, OR EXPLOSION.

When servicing a branch circuit fed by a remotely operated circuit breaker, move handle of remotely operated circuit breaker to OFF position. Do not rely on remote operation to open circuit breaker.

Failure to follow these instructions will result in personal injury or death.

CIRCUIT BREAKER INSTALLATION

⚠ DANGER

HAZARD OF ELECTRIC SHOCK, EXPLOSION, OR ARC FLASH

- Apply appropriate personal protective equipment (PPE) and follow safe electrical work practices. See NFPA 70E.
- This equipment must be installed and serviced only by qualified electrical personnel.
- Turn off all power supplying this equipment before working on or inside equipment.
- Always use a properly rated voltage sensing device to confirm power is off.
- Replace all devices, doors, and covers before turning on power to this equipment.

Failure to follow these instructions will result in death, or serious injury.


See page 2 for
LynTec
part number explanation

POWERLINK[®] QO(B)-PL Remotely Operated Circuit Breakers require a power supply capable of delivering at least two amperes at 24 Vdc for a minimum of 50 milliseconds. One-, two-, and three-pole circuit breakers all have one internal motor, and power requirements are the same regardless of the number of poles and ampere ratings.

The required power supply ampacity and control device contact rating are determined by the number of circuit breakers to be switched simultaneously (i.e., four circuit breakers switched simultaneously require a power supply and a control device contact rated 8 amperes minimum). The control device may be either a normally-open (NO)/normally-closed (NC) contact; a single-pole, double-throw switch (SPDT); or other three-wire control device.

1. Turn off all power supplying this equipment before working on or inside equipment.
2. Before installing circuit breaker turn circuit breaker handle to OFF position.
3. Remove panelboard cover and deadfront. Verify power is off with voltage meter before proceeding.

Installation of circuit breaker into panelboard/load center (refer to figure below)

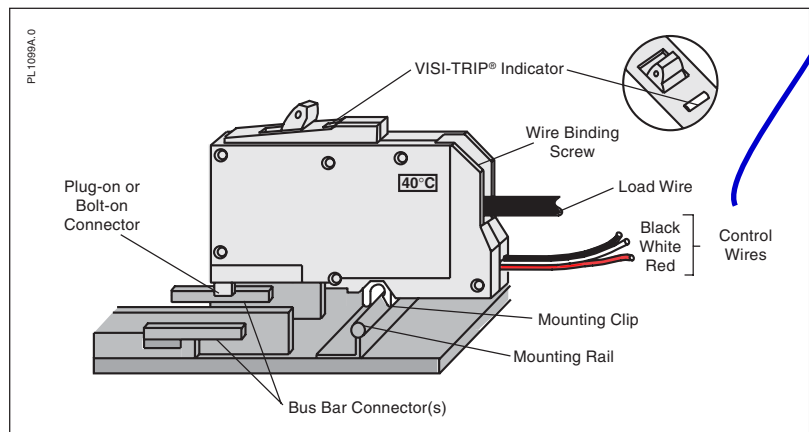

4. Except for remotely operated connections, QO(B)-PL remotely operated circuit breakers are installed in a panelboard/load center the same as conventional QO(B) circuit breakers.

Connection of remotely operated circuit (refer to the figure on next page)

5. Assure that power supply and control device meet requirements listed under "Remotely Operated Circuit Requirements."

All LynTec supplied breakers have special 60" control wires. (Square D standards are 18".)

CIRCUIT BREAKER INSTALLATION

CAUTION

HAZARD OF CIRCUIT BREAKER DAMAGE.

Connect the 24 Vdc remote control wiring as shown on this page.

Failure to follow these instructions can permanently damage the remotely operated circuit breaker.

6. All wiring and splicing must comply with applicable code requirements for Class 1 circuits. Refer to paragraph 373-8 and article 725 of the National Electrical Code.
7. Three #18 AWG control wires are attached to the remotely operated circuit breaker for connection to the power supply and remote control device and should be cut to the required length to reach the splice connections. Use #18 AWG or larger conductors with 600 V insulation and approved wire connectors for splices.
8. Connect the black lead of the remotely operated circuit breaker to the negative (-) terminal of the 24 Vdc power supply. Connect the red lead of the remotely operated circuit breaker to the positive (+) terminal of the 24 Vdc power supply. Connect the white lead of the remote control device. The remote control device provides connections between either positive or negative potential of the power supply and the white wire of the remotely operated circuit breaker, as appropriate.
9. Applying the positive potential of the power supply to the white wire (contact closure between the red wire and white wire) will operate the remote mechanism of the circuit breaker to the OFF position. Applying the negative potential of the power supply to the white wire (contact closure between the black wire and the white wire) will operate the remote mechanism of the circuit breaker to the ON position. A control circuit utilizing a normally open (NO)/normally closed (NC) contact is illustrated below.


NOTE: The remote mechanism will not move the circuit breaker handle. Also, the remote mechanism cannot turn power ON when the circuit breaker is tripped (VISI-TRIP® flag indicator showing) or when the circuit breaker handle is in the OFF position.

Installation of the trim and operational checks

10. Remove corresponding twist-out from panelboard trim and replace trim.
11. Turn power to panelboard on.
12. Turn remotely operated circuit breaker handle to the ON position.
13. Turn power to the remotely operated circuit on and test this circuit, turning remotely operated circuit breaker off remotely, then on remotely. If power to remote controlled circuit breaker load does not switch off and on, turn off power to remotely operated circuit and panelboard and check wiring.

NOTE: A power supply is available from Square D Company, Cat. No. QOPLPS (plug-on) or QOBPLPS (bolt-on).

Splice not normally required with LynTec supplied breakers with 60" leads.

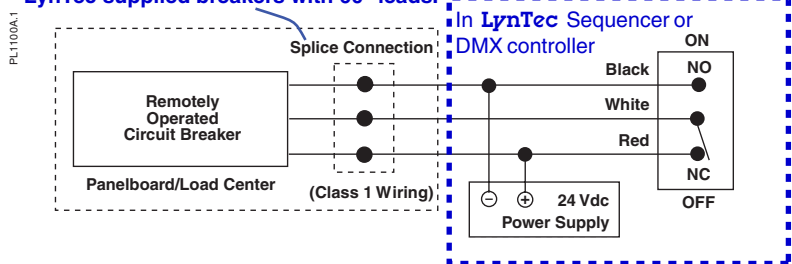

Electrical equipment should be installed, operated, serviced and maintained only by qualified personnel. No responsibility is assumed by Schneider Electric for any consequences arising out of the use of this material.

© 1991-2003 Schneider Electric All Rights Reserved

LynTec
part numbers

MB series motorized circuit breakers (Snap-On)
May be used in LCLC, LCP, MSLC, MSP, SLC or SP series panels.

BMB series motorized circuit breakers (Bolt-On)
Use only in LCP, MSP or SP Panelboards

All BMB & MB series breakers have Square D part number suffix of -5393 indicating a special 60 inch lead length for remote control wires required to connect to LynTec control boards in low voltage cabinet.

** = Stocked items

****MB-15 = 15 Amp.** Square D QO-115PL-5393
****BMB-15 = 15 Amp.** Square D QOB-115PL-5393

****MB-20 = 20 Amp.** Square D QO-120PL-5393
****BMB-20 = 20 Amp.** Square D QOB-120PL-5393

****MB-30 = 30 Amp.** Square D QO-130PL-5393
****BMB-30 = 30 Amp.** Square D QOB-130PL-5393

Two pole motorized - call for pricing & delivery

MB-215 = 15 Amp. Square D QO-215PL-5393
BMB-215 = 15 Amp. Square D QOB-215PL-5393

****MB-220 = 20 Amp.** Square D QO-220PL-5393
****BMB-220 = 20 Amp.** Square D QOB-220PL-5393

MB-230 = 30 Amp. Square D QO-230PL-5393
BMB-230 = 30 Amp. Square D QOB-230PL-5393

40A, 50A or 60A, Two pole also available on Special Order

Three pole motorized - call for pricing & delivery

MB-315 = 15 Amp. Square D QO-315PL-5393
BMB-315 = 15 Amp. Square D QOB-315PL-5393

MB-320 = 20 Amp. Square D QO-320PL-5393
BMB-320 = 20 Amp. Square D QOB-320PL-5393

MB-330 = 30 Amp. Square D QO-330PL-5393
BMB-330 = 30 Amp. Square D QOB-330PL-5393

LynTec also stocks UMB & BUMB (un-motorized) QO series circuit breakers including HM (High Magnetic). Recommended for eliminating nuisance trips in high inrush applications. [All BMB & MB-x15's and BMB & MB-x20's are HM breakers.]

800-724-4047

LynTec ■ www.LynTec.com

8401 Melrose Dr., Lenexa, KS 66214, USA

Voice 913-529-2233 • Fax 888-722-4157 or 913-529-4157

LynTec overprint 139-0216-08.2 9/23/06

Square D Company
 3700 Sixth Street SW
 Cedar Rapids IA 52404 USA
 1-888-SquareD (1-888-778-2733)
www.SquareD.com

