

Planning and Layout Worksheet — As-built door label

**LCP 341-xx-M400 Lighting Control Panelboard**

Breaker types, sizes, positions and connections

Job \_\_\_\_\_

Panel \_\_\_\_\_

Comments \_\_\_\_\_

by \_\_\_\_\_ Date \_\_\_\_\_

Transfer as-built information to the door label upon completion.

Keep this sheet for as-built documentation

Available as PDF download  
[www.lyntec.com/139-0386\\_LCP341-M400Plnr.pdf](http://www.lyntec.com/139-0386_LCP341-M400Plnr.pdf)


Each motorized breaker is actuated by a command from a DMX control device.  
 As-built door label example:  
 The DMX # \_\_\_\_\_ is the DMX address of this breaker.  
 The board jumpers set the DMX address of the #1 position of the board.  
 Positions 2 to 10 are subsequent addresses. Example: #1= 201, #2 to #10 = 202 to 210.  
 Bold line around box  = **suggested** control board: #1 (Top), #2, #3 or #4.  
 Fill in  box to indicate which control board this breaker is connected to.

LC-10M Master & LC-10S Slave circuit boards in left-hand, low-voltage cabinet.



DMX PROTOCOL for LynTec LC series		
Code Range (8 bit)	%	Circuit Function
0-63	0-24	Turns breaker off. When applied to all breakers simultaneously, they turn OFF at a .25 second step rate.
64-191	25-74	No change
192-255	75-100	Turns breaker on. When applied to all breakers simultaneously, they turn ON at a .25 second step rate.

**LCP 341-xx-M400**  
 (10k AIR main) - 400A bus  
 xx = Number of controller circuits  
**10, 20, 30, 40 or 50.**


Cabinet outline - Surface mount only  
 Outside dimensions: 28.06" w, 68.2" h, 6.13" d.  
 Knockout panels supplied in both ends.

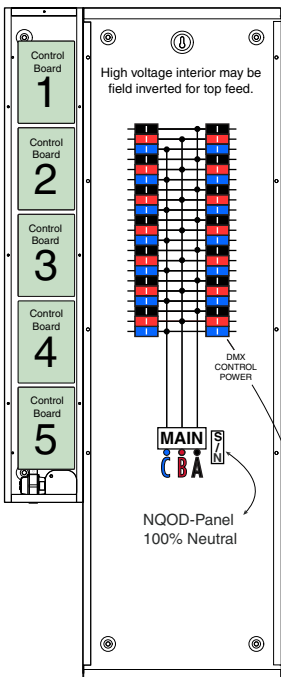

Square D NQOD MB Panel with LynTec sidecar.  
 Main Breaker: 400A (10k AIR) (Amps Interrupt Rating)  
 Square D # LA36400  
 Main Breaker wire: #1-600 kcmil Cu or two #1-250 kcmil Cu (per NEC)  
 100% Neutral has one feed lug that accepts one #1-750 kcmil or two #1-300 kcmil Cu wires.

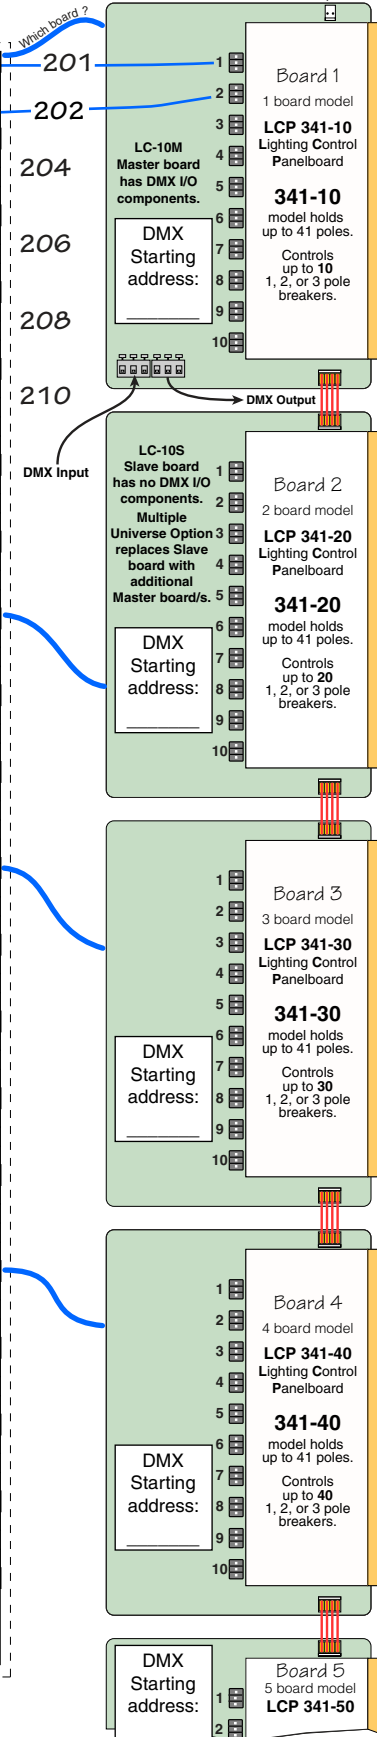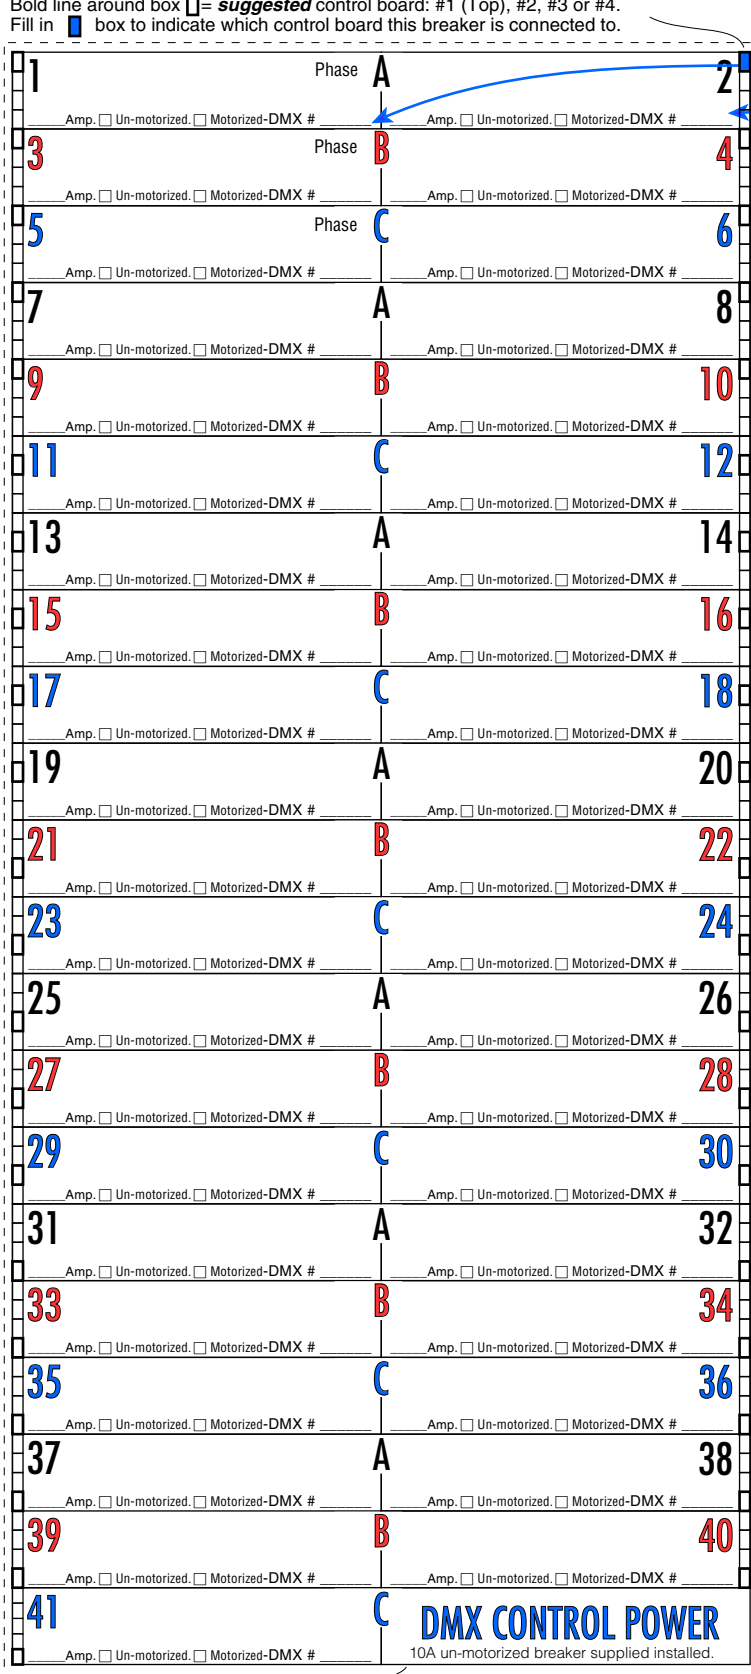

# 400 Amp Lighting Panelboard Outline Drawing

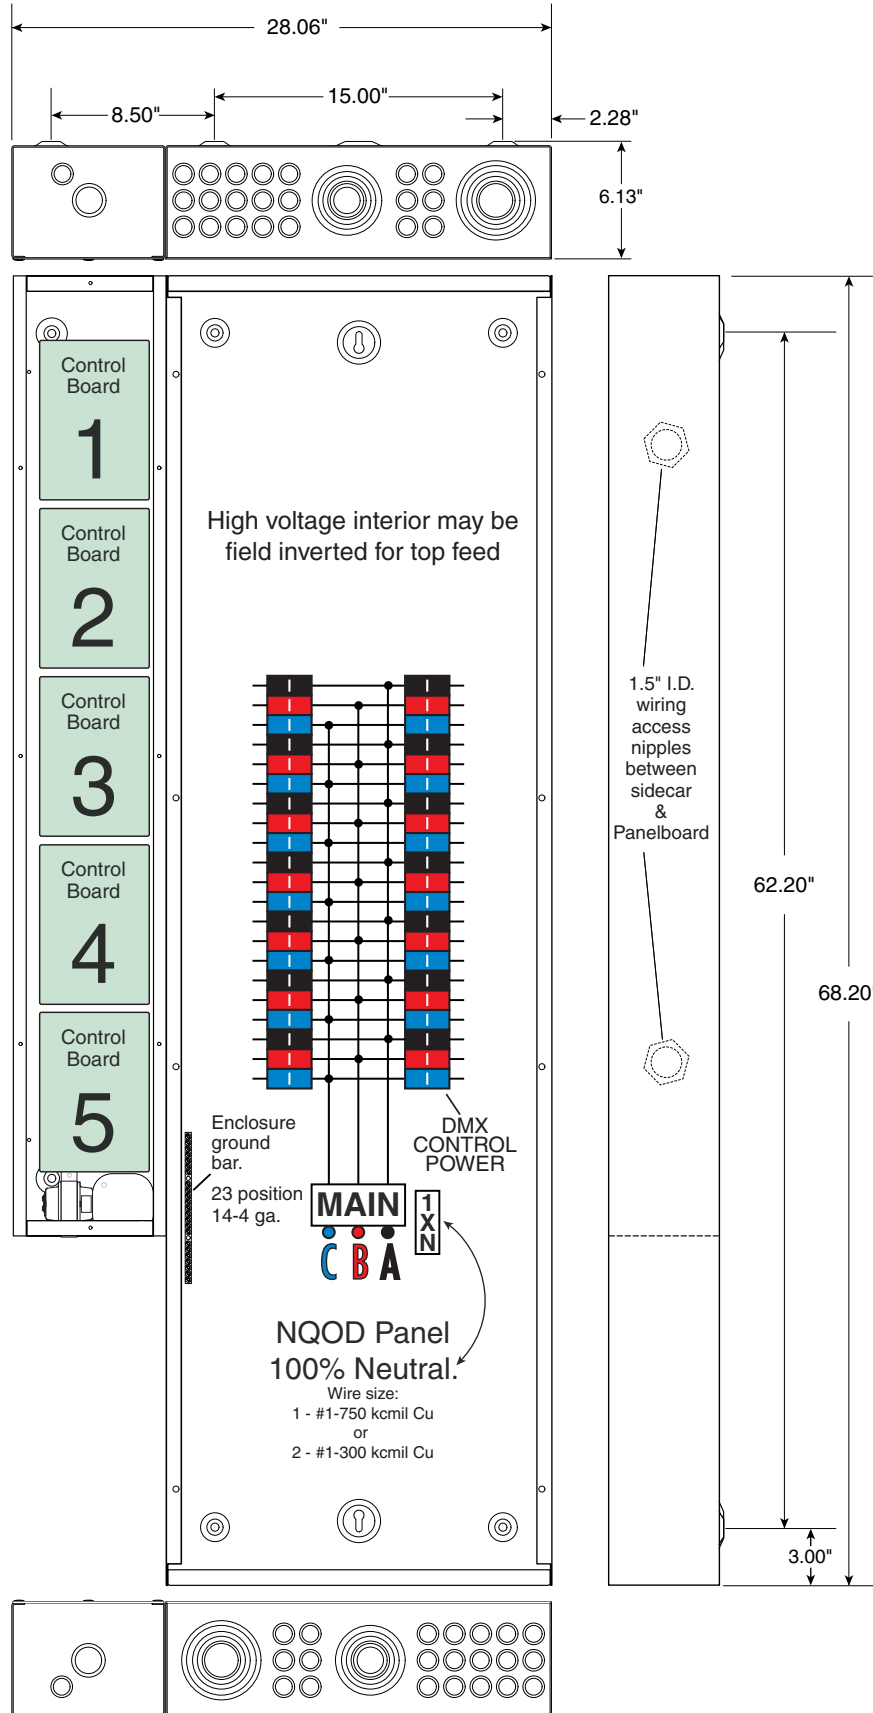

**LynTec**

Lighting Control Panelboard

**LCP 341-10-M400**

Up to 10 DMX controllable circuits

**LCP 341-20-M400**

Up to 20 DMX controllable circuits

**LCP 341-30-M400**

Up to 30 DMX controllable circuits

**LCP 341-40-M400**

Up to 40 DMX controllable circuits

**LCP 341-50-M400**

Up to 50 DMX controllable circuits  
(limited by 42 circuit code rule)

Square D NQOD MB Panel  
with LynTec sidecar.

Standard LCP Main Breaker:  
**400 Amp. - 10k AIR - LA36400**  
[Amps Interrupt Rating]

Main Breaker wire:  
#1-600 kcmil Cu or  
2-#1-250 kcmil Cu (per NEC)  
100% Neutral has one feed lug that  
accepts 1- #1-750 kcmil  
or 2-#1-300 kcmil Cu wires.

Surface Mount  
Outside dimensions  
28.06" w., 68.2" h., 6.13" d.

High voltage interior may be  
field inverted for top feed

1.5" I.D.  
wiring  
access  
nipples  
between  
sidecar  
&  
Panelboard

62.20"

68.20"

3.00"

**Program Card — As-built record**  
**LynTec LCLC or LCP 341 series DMX controlled circuit breaker panel.**  
 see reverse side for DMX PROTOCOL

As-built EDO field programming record.  
 Indicate if a stored on condition was programmed for each breaker by filling corresponding circle.

**EDO Programming**  
**Emergency DMX Override**

For egress or emergency lighting triggered by an external contact.

Connecting **EDO to Common** with an external contact overrides the incoming DMX signal and forces all breakers to the pre-programmed **EDO** state.

**How to program EDO**

- A. Turn the **DMX CONTROL POWER** off.
- B. Note the DMX Starting Address \_\_\_\_\_.
- C. Move jumpers to reset the **DMX STARTING** Address to 555.
- D. Turn the **DMX CONTROL POWER** on. The board will scan through the breakers 1 thru 10 and display the previous EDO settings if there are any stored in memory. All numbered LEDs that were on when the EDO setting was stored will light.
- E. Press the green **EDO ON-OFF Toggle** button once. The #1 breaker LED will flash; Fast for ON — Slow for OFF. **Toggle** the same green button to the desired state of the #1 breaker.
- F. Advance to breaker #2 with the red **EDO Advance** button. (#1 now indicates the condition you left it in. Lit = ON)
- G. Set the rest of the positions, having breakers connected, to your desired EDO condition. Finish your settings with one more **EDO Advance** keystroke. All breaker LEDs will indicate their EDO state. If you change your mind, you can loop back to 1 with another **Advance** keystroke. #1 will begin flashing again to indicate it's ready to edit.
- H. To store your EDO settings, turn **DMX CONTROL POWER** off and wait until the large red LED extinguishes.
- I. Reset the DMX Starting Address jumpers to the one remembered in step B.
- J. Turn on DMX CONTROL POWER. Now whenever you connect the EDO terminal to common, the red EDO LED will light and your stored EDO settings will *override* any DMX commands until the emergency contact is opened. If you have programmed Post EDO, all circuits will go to that scenario when the emergency contact is opened. With no Post EDO program all breakers default to off and will require another DMX command to actuate.

You have the option to program the Post EDO condition to reset the breakers to a different condition when the EDO contacts are reopened.

**How to program Post EDO**

- K. With power off, move jumpers to reset the DMX Starting Address to 599. Return to step D. to program **Post EDO**.

Panel _____	Location _____	Revision _____	Date _____	By _____
<p><b>Bold line around box is suggested</b> control board: #1 (Top), #2, #3 or #4. Fill in box to indicate which control board this breaker is connected to.</p>				
1	Phase A	2	Phase A	
3	Phase B	4	Phase B	
5	Phase C	6	Phase C	
7	Phase A	8	Phase A	
9	Phase B	10	Phase B	
11	Phase C	12	Phase C	
13	Phase A	14	Phase A	
15	Phase B	16	Phase B	
17	Phase C	18	Phase C	
19	Phase A	20	Phase A	
21	Phase B	22	Phase B	
23	Phase C	24	Phase C	
25	Phase A	26	Phase A	
27	Phase B	28	Phase B	
29	Phase C	30	Phase C	
31	Phase A	32	Phase A	
33	Phase B	34	Phase B	
35	Phase C	36	Phase C	
37	Phase A	38	Phase A	
39	Phase B	40	Phase B	
41	Phase C			

**DMX CONTROL POWER**  
 10A un-motorized breaker supplied installed.

**How it works**

The **DMX CONTROL POWER** circuit breaker powers the control circuit boards via a 24 volt transformer.

Motorized circuit breakers (face-marked **REMOTELY OPERATED**) are individually actuated by a low-voltage command from a remote DMX control device. (light board)

Each of the **numbered** LEDs, 1 thru 10, indicate the status of the **attached** breaker.

Lit = ON — Unlit = OFF

Flashing = A command execution is in progress.

Each circuit board controls up to ten 1, 2 or 3 pole motorized circuit breakers.

Each motorized breaker acts as a circuit protection device as well as a remotely operated switch. The breaker handle

moves **only** when over-current-tripped or manually turned off.

Master and Slave control boards are used depending upon the number of DMX universes served. (Slaves have no DMX input or output components).

DMX signals are fed to the Master board/s from the appropriate DMX universe.

Power, DMX and EDO data are daisy-chain fed board-to-board by the yellow jumper connectors. (**EDO = Emergency DMX Override**)

The **STARTING DMX** address is set for each board by jumpers. Depending on the results of a power-up-scan, consecutive DMX addresses are only used for the headers with breakers attached.

The DMX Output is an optoisolated, buffered, loop-thru for driving other DMX devices.

Output data availability is indicated by a small-green flickering **DMX Output** LED.

**MANUAL TEST CONTROL**

The circuit breakers may be manually controlled by the **TEST** switches on each board.

The test switches work in the absence of a DMX signal. A valid DMX signal, indicated by a flashing large-green **Receiving DMX** LED, overrides the test switches.

**Emergency DMX Override**  
 see above right

www.**LynTec**.com  
**800-724-4047**  
 8-5 Central Time

DMX PROTOCOL for <b>LynTec LCRP</b> series		
Code Range (8 bit)	%	Circuit Function
0-63	0-24	Turns breaker off. When applied to all relays simultaneously, they turn OFF at a .25 second step rate.
64-191	25-74	No change
192-255	75-100	Turns breaker on. When applied to all relays simultaneously, they turn ON at a .25 second step rate.

NOTES

---



---



---



---



---



---



---



---

# LynTec — AVAILABLE MODELS — LynTec

Panel electrical specifications and configurations — Outline dimensions

See  at [LynTec.com](http://LynTec.com) for *model specific* Design or Submittal PDFs.

## LOAD CENTERS

### LCLC 326-xx-Mxxx Lighting Control Load Center

3Ø, 208Y/120 Vac, 4 wire. — 100 Amp Main Breaker Standard

#### LynTec Lighting Control Load Center

MODEL NUMBERS

- LCLC 326-10-Mxxx**  
(Up to 10 DMX controlled circuits)
- LCLC 326-20-Mxxx**  
(Up to 20 DMX controlled circuits)
- LCLC 326-30-Mxxx**  
(Up to 26 DMX controlled circuits)

Square D QO327M100 Load Center with LynTec low-voltage sidecar.

Standard back-fed Main Breaker:  
Squared D# QO3100VH. 100A,  
(VH = 22k AIR)  
[Amps Interrupt Rating]

Back-fed Main Breaker options  
Part# suffix — **Bold face**=Amps  
-M3030, -M3035: (10kAIR)  
Square D# QO30xx

-M3050, -M3060, -M3070 or -M3090


Squared D# QO3xxVH  
(all VH = 22k AIR)

Wire Sizes  
#4 - 2/0 Cu

Outside dimensions  
20.9" w., 29.8" h., 3.9" d.



Cabinet Outline — Surface mount only

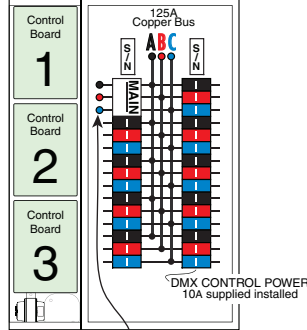

**Main Lug Only -MLO option**  
Remove Back fed main and top feed as a MLO to gain 3 circuits. Feed from a protected disconnect.

Provides access to branch breaker positions 1, 3, & 5.

Model number becomes a

- LCLC 329-10-MLO**  
(10 DMX controlled circuits)
  - LCLC 329-20-MLO**  
(20 DMX controlled circuits)
  - LCLC 329-30-MLO**  
(Up to 29 DMX controlled circuits)  
(Holds up to 29 one pole breakers)
- 125 Amp. Panel Bus Rating  
Wire size: #6 - 2/0 Cu

### LCLC 341-xx-Mxxx Lighting Control Load Center

3Ø, 208Y/120 Vac, 4 wire. — 225 Amp Main Breaker Standard

#### LynTec Lighting Control Load Center

MODEL NUMBERS

- LCLC 341-10-Mxxx**  
(Up to 10 DMX controlled circuits)
- LCLC 341-20-Mxxx**  
(Up to 20 DMX controlled circuits)
- LCLC 341-30-Mxxx**  
(Up to 30 DMX controlled circuits)
- LCLC 341-40-Mxxx**  
(Up to 40 DMX controlled circuits)

Square D QO342MQ225 Load Center with LynTec low-voltage sidecar.

Standard Main Breaker:  
Square D# QDL32225. 225 Amp

Main Breaker options  
Part# suffix — **Bold face**=Amps  
-M3150, -M3175 or -M3200  
Square D# QDL32xxx series  
(all 25k AIR) [Amps Interrupt Rating]


**LCLCH** option for 65k AIR Main Breaker  
Square D# QGL32xxx series

Wire Sizes

Main Breaker :  
350 kcmil Al or 250 kcmil Cu.  
100% Neutral has one feed lug  
1- 350 kcmil Al or 1- 250 kcmil Cu

Outside dimensions  
20.9" w., 39.3" h., 3.9" d

Cabinet Outline — Surface mount only

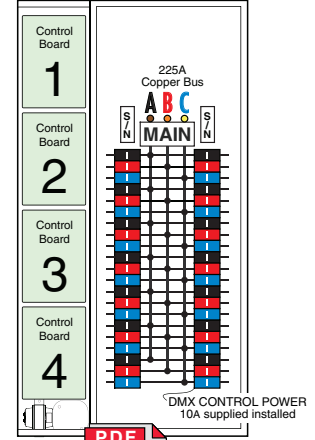

## PANELBOARDS

### LCP 341-xx-Mxxx Lighting Control Panelboard

3Ø, 208Y/120 Vac, 4 wire. — 225 Amp Main Breaker Standard

#### LynTec Lighting Control Panelboard

MODEL NUMBERS

- LCP 341-10-Mxxx**  
(Up to 10 DMX controlled circuits)
- LCP 341-20-Mxxx**  
(Up to 20 DMX controlled circuits)
- LCP 341-30-Mxxx**  
(Up to 30 DMX controlled circuits)
- LCP 341-40-Mxxx**  
(Up to 40 DMX controlled circuits)
- LCP 341-50-Mxxx**  
(Up to 41 DMX controlled circuits - limited by 42 circuit code rule)

Square D NQOD-NL MB Panel with LynTec low-voltage sidecar.

Standard **LCP-225A** Main Breaker:  
225 Amp. - 65k AIR - MJG36225

Square D MJG36xxx or MHG36xxx series  
(all 65k AIR) [Amps Interrupt Rating]


Main Breaker options

Part# suffix — **Bold face** = Amps  
-MHG3125, -MJG3150, -MJG3175 or -MJG3200

Wire Sizes

Main Breaker: 3/0 - 350 kcmil Al/Cu  
200% Neutral has one feed lug that accepts 2 - 250 kcmil Cu wires

Cabinet Outline — Surface mount only

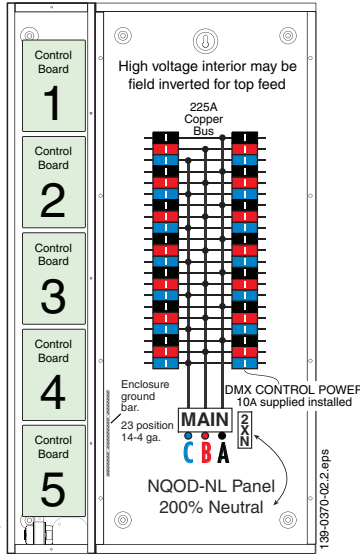

Outside dimensions  
28.06" w., 50" h., 6.13" d.

Knockout panels supplied in both ends



### LCP 341-xx-M400 Lighting Control Panelboard

3Ø, 208Y/120 Vac, 4 wire. — 400 Amp Main Breaker Standard

#### LynTec Lighting Control Panelboard

MODEL NUMBERS

- LCP 341-10-M400**  
(Up to 10 DMX controlled circuits)
- LCP 341-20-M400**  
(Up to 20 DMX controlled circuits)
- LCP 341-30-M400**  
(Up to 30 DMX controlled circuits)
- LCP 341-40-M400**  
(Up to 40 DMX controlled circuits)
- LCP 341-50-M400**  
(Up to 41 DMX controlled circuits - limited by 42 circuit code rule)

Square D NQOD MB Panel with LynTec low-voltage sidecar.

Standard **LCP 400A** Main Breaker:  
400 Amp. - 10k AIR - LA36400  
[Amps Interrupt Rating]


Wire Sizes

Main Breaker: 1 #1- 600 kcmil Cu or 2 - #1-250 kcmil Cu (per NEC)  
100% Neutral has one feed lug that accepts one #1-750 kcmil or two #1-300 kcmil Cu wires.

Outside dimensions:  
28.06" w., 68.2" h., 6.13" d.

Knockout panels supplied in both ends

Cabinet Outline — Surface mount only

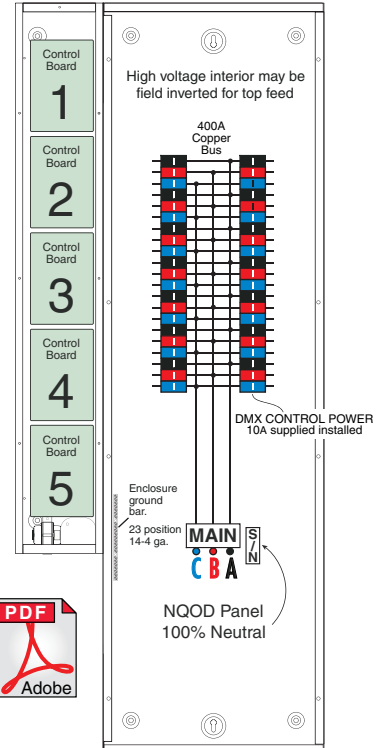



# Specifier's Guide for LynTec Lighting Control Panels

## Load Center and Panelboard part number explanation

Load Center — Panelboard — *What's the difference?*

**Panelboards** are the electrician's choice because they have 3 times the wiring space. Panelboards are used when bolt-on breakers, 200% neutrals or high circuit counts are required.

**Load Centers** are typically used where the circuit count isn't high, offering the lowest cost.

### Lighting Control Panelboards

**LCP 341- 30 -2U -MJG3200**

**341** — Number of available single pole circuit breaker spaces  
41

**30** — Control board capacity— will drive up to this number of 1, 2 or 3 pole motorized breakers  
10, 20, 30, 40, 50

**2U** — number of DMX512 Universes  
1U, 2U, 3U, 4U, 5U

**MJG3200** — Main breaker & Main Lug Only options  
SEE BELOW

3 = 3 phase 208/120v, 4 wire

### 3 Phase Panelboards

#### 400 A Panelboard

The standard LCP 341-xx-M400 has a LA36400, 3 pole, 400 Amp main breaker (115 kVA). 10kAIR [Amps Interrupt Rating].  
 Optional main breakers — call for price and delivery.

**-MLO (Main Lug Only)** is an option.

#### 225 A Panelboard

The standard LCP 341-xx has a JGP36225, 3 pole, 225 Amp main breaker (65 kVA). 65k AIR [Amps Interrupt Rating].  
 Optional main breakers [All 65kAIR]

125A ..... -MHG3125 (36 kVA transformer)  
 150A ..... -MJG3150 (45 kVA)  
 175A ..... -MJG3175 (50 kVA)  
 200A ..... -MJG3200 (60 kVA)

**-MLO (Main Lug Only)** is an option.

### Multiple DMX512 Universe Option

LynTec Lighting Control panels have the option of multiple universe control. All LC-10 boards service up to 10 - one, two or three pole motorized breakers. The first/top control board is always a LC-10M Master board. The Master board has the opto-isolated DMX512 input and opto-isolated, buffered, feed-thru output components.

In a standard one-universe system, the subsequent boards are slaves. The lower-cost, LC-10S Slave boards have their own starting address, but derive their opto-isolated DMX data from the Master board above.

When multiple universes are desired, two or more LC-10M Master boards are supplied.

Each universe requires a Master board. Any Master may have one or more subsequent slaves. See page 3 for possible board counts in each type panel.

*Please include Branch Breakers to complete your specification.*

### Lighting Control Load Centers

**LCLCH 341- 30 -2U -MQD3200**

**LCLCH** — **H option** 65k AIR Main Breaker. Amps Interrupt Rating (Available only on 341)

**341** — Number of available single pole circuit breaker spaces  
326, 341

**30** — Control board capacity— will drive up to this number of 1, 2 or 3 pole motorized breakers  
10, 20, 30, 40

**2U** — number of DMX512 Universes  
1U, 2U, 3U, 4U

**MQD3200** — Main breaker & Main Lug Only options  
>>>>>>

3 = 3 phase 208/120v, 4 wire

### Load Center Main Breaker Options

#### Large 3 Phase Load Center

The standard LCLC 341-xx has a factory installed, 3 pole, 225 Amp main breaker (65 kVA transformer) [25kAIR Amps Interrupt Rating].  
 Optional main breakers [All 65kAIR]

150A ..... -MQD3150 (45 kVA)  
 175A ..... -MQD3175 (50 kVA)  
 200A ..... -MQD3200 (60 kVA)

**-MLO (Main Lug Only)** option:  
 We only stock LCLC panels with main breakers. If your specification requires a **-MLO** we will provide it at the same price as the standard panel.

**Higher Interrupt Current Option**  
 LoadCenter: OGL32xxx series 65k AIR main breaker— 150,175, 200 or 225A  
 Add the **H** to the model type. Example: LCLCH 341.

#### Small 3 Phase Load Center

The standard LCLC 326-xx has a bracket-retained, clip-on, back-fed, 3 pole, 100 Amp main breaker.

Optional main breaker sizes available:

⊗ 30A ..... -M3030 (7.5 kVA transformer)  
 ⊗ 35A ..... -M3035 (10 kVA)  
 + 50A ..... -M3050 (15 kVA)  
 + 70A ..... -M3070 (20 kVA)  
 + 90A ..... -M3090 (25 kVA)

⊗ 30A & 35A: 10kAIR  
 + 50A up: 22kAIR (Amps Interrupt Rating)



**RBLC-10 or RBLC-20**  
 10 or 20 circuit Remote Breaker Lighting Controller  
 Provides DMX control for any Square D QO panel by using **BMB** or **MB** breakers.

# The UL listed heart of the LynTec Lighting Control and Sound Sequencing Panels

Handle functions as a normal circuit breaker.

When switched off or tripped due to overload, the remote control will not turn on power.

When in the normal ON position, the motorized remote control will turn it off and on.

The motor does not move the handle... it only opens or closes the high current contacts.

Snap on clip with heavy steel force spring. Contact is held tightly in place on panel bus feeder finger.


Under high current stress, magnetic forces actually increase contact pressure.

Also available in Bolt-on versions for Panelboards only.

Red flag snaps into window when circuit breaker is tripped.

Microswitch, behind Actuator arm, opens motor circuit at end of transition.

The time-proven **SQUARE D** QOPL series motorized circuit breaker. Using a breaker proven in over 20 years of service, **SQUARE D** added a motor mechanism in 1986 to provide remote control. *Yes, Virginia, some breakers are intended to be used as switches!*

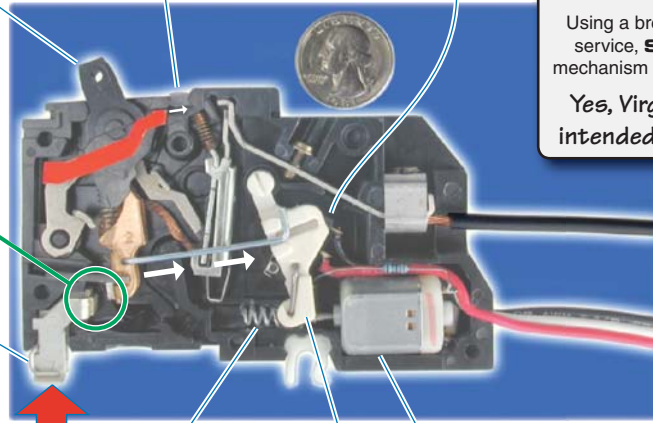

**Controlled AC POWER OUT**

3 wire, low-voltage, 60" pigtail with 600 volt insulation. Connects to Lighting Controller in low voltage cabinet.

**AC POWER IN**  
Spring used as a worm gear drive  
Actuator arm  
Low voltage motor. Life expectancy: 30,000 On-Off operations.

## Field installed, UL & CSA listed, motorized circuit breakers are required to complete the Lighting Control Panel package.

**BLUE TYPE = Bolt-on breakers for Panelboards ONLY** — Clip-on breakers fit Load Centers or Panelboards

**BMB-15** ..... Bolt-on Motorized Breaker, Square D #QOB115PL-5393

**MB-15** ..... Clip-on Motorized Breaker, Square D #QO115PL-5393  
One pole, 15 Amps. Special 60" leads. Square D trip curve: 730-4

**BMB-20** ..... Bolt-on Motorized Breaker, Square D #QOB120PL-5393

**MB-20** ..... Clip-on Motorized Breaker, Square D #QO120PL-5393  
One pole, 20 Amps. Special 60" leads. Square D trip curve: 730-4  
15 and 20 Amp breakers have a HM, (High Magnetic) rating. HM reduces nuisance breaker trips on high inrush loads.

**BMB-220** ..... Bolt-on Motorized Breaker, Square D #QOB220PL-5393

**MB-220** ..... Clip-on Motorized Breaker, Square D #QO220PL-5393  
Two pole, 20 Amps. Special 60" leads. Square D trip curve: 730-4  
15 and 20 Amp breakers have a HM, (High Magnetic) rating. HM reduces nuisance breaker trips on high inrush loads.

**BMB-30** ..... Bolt-on Motorized Breaker, Square D #QOB130PL-5393

**MB-30** ..... Clip-on Motorized Breaker, Square D #QO130PL-5393  
One pole, 30 Amps. Special 60" leads. Square D trip curve: 730-5

**BMB-230** ..... Bolt-on Motorized Breaker, Square D #QOB230PL-5393



**MB-230** ..... Clip-on Motorized Breaker, Square D #QO230PL-5393  
Two pole, 30 Amps. Special 60" leads. Square D trip curve: 730-5

3 pole Bolt-on and Clip-on Motorized Breakers are also available on special order. — Call 800-724-4047 for price and delivery.

### UnMotorized circuit breakers for un-controlled circuits

**BUMB-10, -15, -20 or -30** are Bolt-on, 10, 15, 20 or 30 amp single pole. Square D QOB110, QOB115HM, QOB120HM or QOB130. — 15s & 20s are High Magnetic.

**UMB-10, -15, -20 or -30** are Clip-on, 10, 15, 20 or 30 amp single pole. Square D QO110, QO115HM, QO120HM or QO130. — 15s & 20s are High Magnetic.

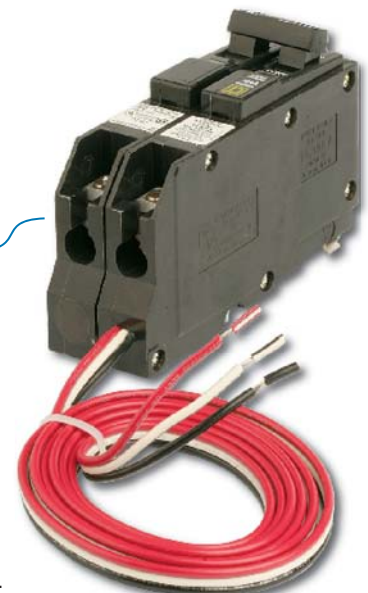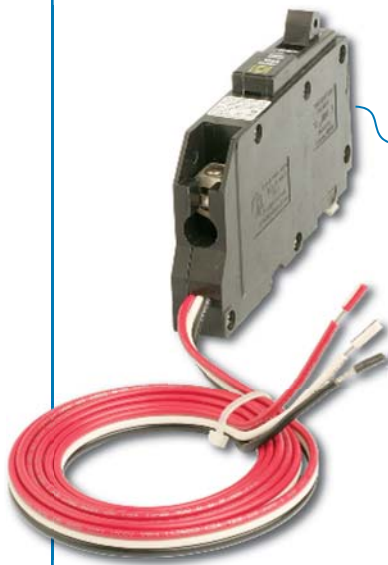

# Instruction Bulletin

## QO-PL (Plug-on), QOB-PL (Bolt-on) Powerlink® Remotely Operated Circuit Breakers

(Use in Type QO Load Centers and Type NQO, NQOB, and NQOD Panelboards)

Retain for future use.

### REQUIREMENTS

#### Remotely Operated Circuit Requirements

#### **⚠ DANGER**

##### HAZARD OF ELECTRIC SHOCK, BURN, OR EXPLOSION.

When servicing a branch circuit fed by a remotely operated circuit breaker, move handle of remotely operated circuit breaker to OFF position. Do not rely on remote operation to open circuit breaker.

**Failure to follow these instructions will result in personal injury or death.**

### CIRCUIT BREAKER INSTALLATION

#### **⚠ DANGER**

##### HAZARD OF ELECTRIC SHOCK, EXPLOSION, OR ARC FLASH

- Apply appropriate personal protective equipment (PPE) and follow safe electrical work practices. See NFPA 70E.
- This equipment must be installed and serviced only by qualified electrical personnel.
- Turn off all power supplying this equipment before working on or inside equipment.
- Always use a properly rated voltage sensing device to confirm power is off.
- Replace all devices, doors, and covers before turning on power to this equipment.

**Failure to follow these instructions will result in death, or serious injury.**


See page 2 for  
**LynTec**  
part number explanation

POWERLINK® QO(B)-PL Remotely Operated Circuit Breakers require a power supply capable of delivering at least two amperes at 24 Vdc for a minimum of 50 milliseconds. One-, two-, and three-pole circuit breakers all have one internal motor, and power requirements are the same regardless of the number of poles and ampere ratings.

The required power supply ampacity and control device contact rating are determined by the number of circuit breakers to be switched simultaneously (i.e., four circuit breakers switched simultaneously require a power supply and a control device contact rated 8 amperes minimum). The control device may be either a normally-open (NO)/normally-closed (NC) contact; a single-pole, double-throw switch (SPDT); or other three-wire control device.

1. Turn off all power supplying this equipment before working on or inside equipment.
2. Before installing circuit breaker turn circuit breaker handle to OFF position.
3. Remove panelboard cover and deadfront. Verify power is off with voltage meter before proceeding.

Installation of circuit breaker into panelboard/load center (refer to figure below)

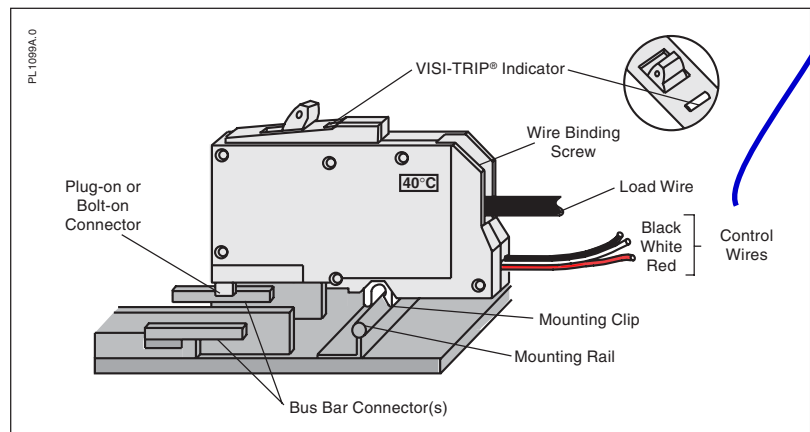

4. Except for remotely operated connections, QO(B)-PL remotely operated circuit breakers are installed in a panelboard/load center the same as conventional QO(B) circuit breakers.

Connection of remotely operated circuit (refer to the figure on next page)

5. Assure that power supply and control device meet requirements listed under "Remotely Operated Circuit Requirements."



**CIRCUIT BREAKER INSTALLATION**

**CAUTION**

**HAZARD OF CIRCUIT BREAKER DAMAGE.**

Connect the 24 Vdc remote control wiring as shown on this page.

**Failure to follow these instructions can permanently damage the remotely operated circuit breaker.**

**LynTec**  
 part numbers

**MB series motorized circuit breakers (Snap-On)**  
 May be used in LCLC, LCP, MSLC, MSP, SLC or SP series panels.

**BMB series motorized circuit breakers (Bolt-On)**  
 Use only in LCP, MSP or SP Panelboards

All **BMB & MB** series breakers have Square D part number suffix of -5393 indicating a special 60 inch lead length for remote control wires required to connect to LynTec control boards in low voltage cabinet.

\*\* = Stocked items

\*\***MB-15** = 15 Amp. Square D QO-115PL-5393

\*\***BMB-15** = 15 Amp. Square D QOB-115PL-5393

\*\***MB-20** = 20 Amp. Square D QO-120PL-5393

\*\***BMB-20** = 20 Amp. Square D QOB-120PL-5393

\*\***MB-30** = 30 Amp. Square D QO-130PL-5393

\*\***BMB-30** = 30 Amp. Square D QOB-130PL-5393

Two pole motorized - call for pricing & delivery

**MB-215** = 15 Amp. Square D QO-215PL-5393

**BMB-215** = 15 Amp. Square D QOB-215PL-5393

\*\***MB-220** = 20 Amp. Square D QO-220PL-5393

\*\***BMB-220** = 20 Amp. Square D QOB-220PL-5393

**MB-230** = 30 Amp. Square D QO-230PL-5393

**BMB-230** = 30 Amp. Square D QOB-230PL-5393

40A, 50A or 60A, Two pole also available on Special Order

Three pole motorized - call for pricing & delivery

**MB-315** = 15 Amp. Square D QO-315PL-5393

**BMB-315** = 15 Amp. Square D QOB-315PL-5393

**MB-320** = 20 Amp. Square D QO-320PL-5393

**BMB-320** = 20 Amp. Square D QOB-320PL-5393

**MB-330** = 30 Amp. Square D QO-330PL-5393

**BMB-330** = 30 Amp. Square D QOB-330PL-5393

LynTec also stocks **UMB & BUMB** (un-motorized) QO series circuit breakers including HM (High Magnetic). Recommended for eliminating nuisance trips in high inrush applications. [All BMB & MB-x15's and BMB & MB-x20's are HM breakers.]

**800-724-4047**

LynTec ■ www.LynTec.com

8401 Melrose Dr., Lenexa, KS 66214, USA

Voice 913-529-2233 • Fax 888-722-4157 or 913-529-4157

LynTec overprint 139-0216-08.2 9/23/06

- All wiring and splicing must comply with applicable code requirements for Class 1 circuits. Refer to paragraph 373-8 and article 725 of the National Electrical Code.
- Three #18 AWG control wires are attached to the remotely operated circuit breaker for connection to the power supply and remote control device and should be cut to the required length to reach the splice connections. Use #18 AWG or larger conductors with 600 V insulation and approved wire connectors for splices.
- Connect the black lead of the remotely operated circuit breaker to the negative (-) terminal of the 24 Vdc power supply. Connect the red lead of the remotely operated circuit breaker to the positive (+) terminal of the 24 Vdc power supply. Connect the white lead of the remote control device. The remote control device provides connections between either positive or negative potential of the power supply and the white wire of the remotely operated circuit breaker, as appropriate.
- Applying the positive potential of the power supply to the white wire (contact closure between the red wire and white wire) will operate the remote mechanism of the circuit breaker to the OFF position. Applying the negative potential of the power supply to the white wire (contact closure between the black wire and the white wire) will operate the remote mechanism of the circuit breaker to the ON position. A control circuit utilizing a normally open (NO)/normally closed (NC) contact is illustrated below.


*NOTE: The remote mechanism will not move the circuit breaker handle. Also, the remote mechanism cannot turn power ON when the circuit breaker is tripped (VISI-TRIP® flag indicator showing) or when the circuit breaker handle is in the OFF position.*

**Installation of the trim and operational checks**

- Remove corresponding twist-out from panelboard trim and replace trim.
- Turn power to panelboard on.
- Turn remotely operated circuit breaker handle to the ON position.
- Turn power to the remotely operated circuit on and test this circuit, turning remotely operated circuit breaker off remotely, then on remotely. If power to remote controlled circuit breaker load does not switch off and on, turn off power to remotely operated circuit and panelboard and check wiring.

*NOTE: A power supply is available from Square D Company, Cat. No. QOPLPS (plug-on) or QOBPLPS (bolt-on).*

**Splice not normally required with LynTec supplied breakers with 60" leads.**

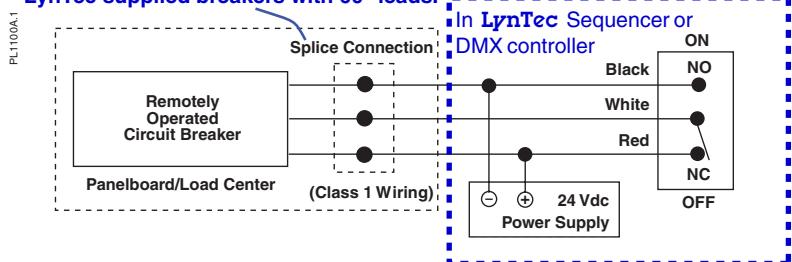

Electrical equipment should be installed, operated, serviced and maintained only by qualified personnel. No responsibility is assumed by Schneider Electric for any consequences arising out of the use of this material.

© 1991-2003 Schneider Electric All Rights Reserved

Square D Company  
 3700 Sixth Street SW  
 Cedar Rapids IA 52404 USA  
 1-888-SquareD (1-888-778-2733)  
 www.SquareD.com

